Perla Barb Cultivator Tiller 175cc

HOW TO CHANGE THE BELT



Remove the 10mm bolt from the inspection plate



Remove the 3 LH side 10mm bolts.



Lift engine and control arm to one side.



Remove the 3 RH side 10mm bolts.



3

The belt is trapped by alignment pins.




Remove the pully 13mm nut and washer.



Remove belt. Don't loose the woodruff key.



Insert new belt within the pins.

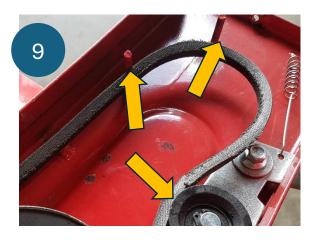

Pins and tensioner pully hold the belt in place.



With the belt in place, lower the engine pully into the belt centre.

- Once lowered, make sure the belt is in line with the pully.
- Slide engine forward to engage belt into pully, this should line up the 6 side bolt holes.
- Put the control arm in position. Install the 4 side 10mm bolts.



Put the inspection front plate back on and install the 2 side and front 10mm bolt.