



Changing the Speed-Feed Thread Adapter

Your Speed-Feed head will come with one of the female thread adapters already installed, the 10mmx-1.25 adapter. **You will not have to change out the female thread adapter in two situations:**

If your trimmer's arbor is female (accepts a male bolt)

In this case, all you have to do is select the correct male bolt adapter that came with your trimmer head. Screw it into the thread adapter already installed in head and the head will be ready to install on your trimmer.


If your trimmer's arbor is a male, 10mm 1.25 bolt

The thread adapter for this bolt is already installed in your Speed-Feed head.

If your trimmer needs a female thread adapter of a different size, then you need to change the thread adapter in the Speed-Feed head. Changing the thread adapter requires completely dismantling the trimmer head, but it is very easy to do and should only take about three minutes.

Here are the steps for changing the Speed-Feed thread adapter:

1. Pull the cap off

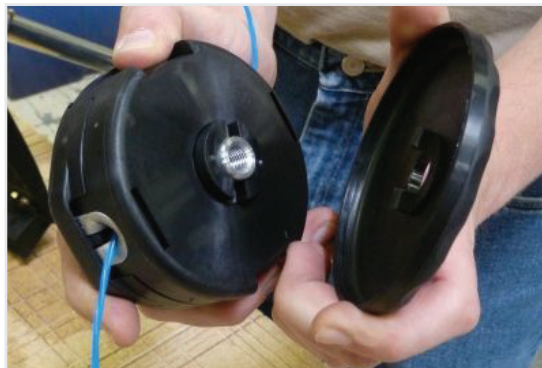

2. Separate the head

Two tabs on the trimmer head must be pressed to separate its two halves. Press each tab on the side of the trimmer head one at a time, then pull the assembly apart.



3. Set the bottom half of the trimmer head aside


4. Remove the spool



5. Remove the thread adapter cap



6. Press the thread adapter out with a hammer

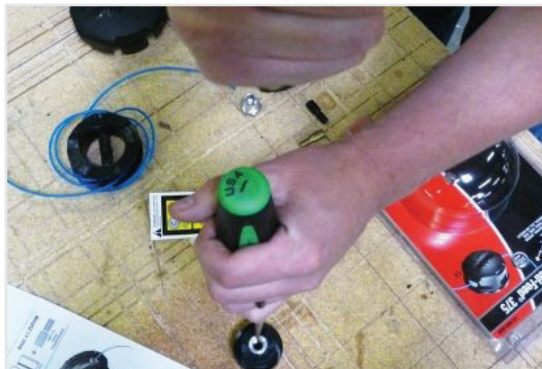

7. Install the correct adapter thread



8. Reassemble the trimmer head by replacing parts in the reverse order that you removed them. These Speed-Heads are conveniently designed so that they can not be reassembled incorrectly. The design simply will not allow the two sides to close unless all the parts are installed properly.

Also, these trimmer heads can not be reassembled with cutting line still installed in the spool. Again, changing a thread adapter should only take about three minutes.