



# How to Load a Speed Feed Trimmer Head

There are a few steps involved in reloading a Speed-Feed trimmer head, but a Speed-Feed reload only takes about 30 seconds!

## 1. Line Up the Trimmer Head Arrows with the Eyelets


Speed-Feed trimmer heads have two arrows on the top of their heads set at 180°.

The first step to reload the line is to line up the arrows with the trimmer head eyelets as shown in the picture opposite. Light will be visible on the other side if you look through the holes.



## 2. Load Line Through One Side of the Trimmer Head

Guide a very long length of line through one of the eyelets out to the other side.

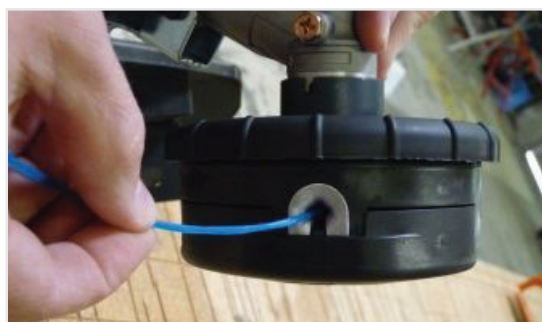




# How to Load a Speed Feed Trimmer Head

## 3. Even Out Line Lengths

Extend both ends of the line all the way out until their lengths match. You will have to step several feet away from the trimmer to do this.

 Walk back toward the trimmer and release the lines.

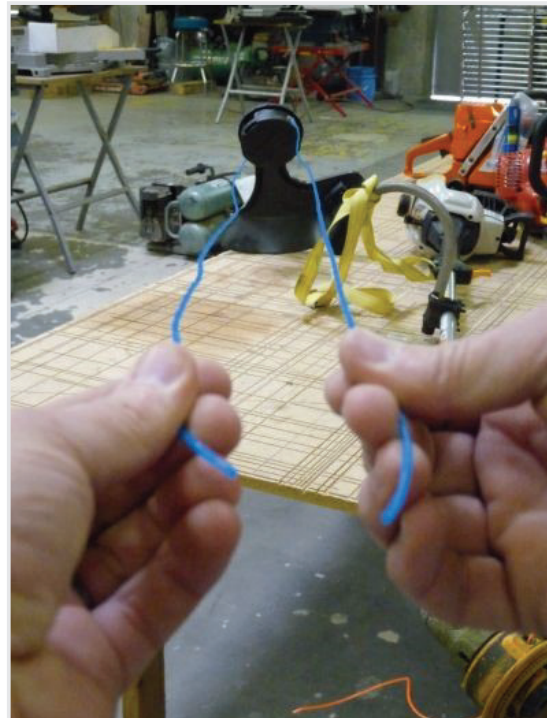

## 4. Load the Line by Twisting the Trimmer Head

Twist the top of the trimmer head in the indicated direction.

The cutting line will automatically load in both ends of the trimmer as you twist the head!

Loading trimmer line with a Speed-Feed trimmer head takes under 30 seconds.

