




INV-2000 2kW GENERATOR




Engine Assy

INV-2000G-1-1	ENGINE GK80I
INV-2000G-1-2	SCREW
INV-2000G-1-3	CAP
INV-2000G-1-4	SILENCER SIDE COVER
INV-2000G-1-5	TUBE, FUEL
INV-2000G-1-6	BOLT

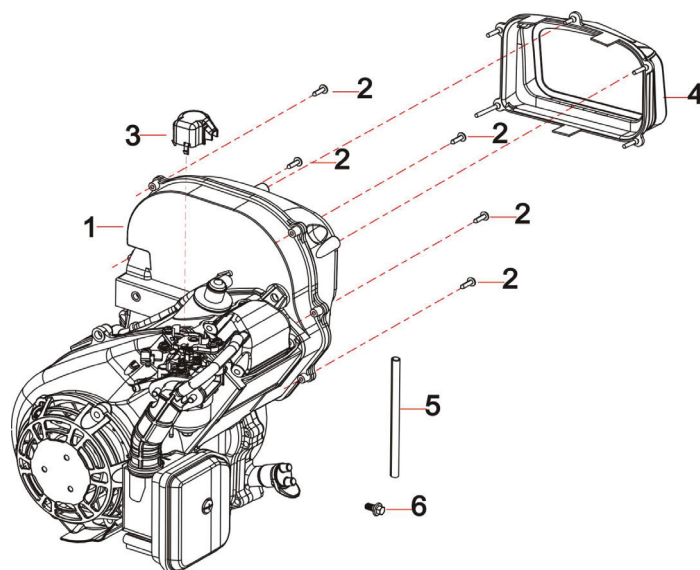


Fuel Tank Assy

INV-2000G-2-1	TANK, FUEL
INV-2000G-2-2	FUEL FILTER
INV-2000G-2-3	COVER, FUEL TANK
INV-2000G-2-4	PRESSING PLATE
INV-2000G-2-5	FUEL GAUGE
INV-2000G-2-6	BUSH
INV-2000G-2-7	FILTER ELEMENT

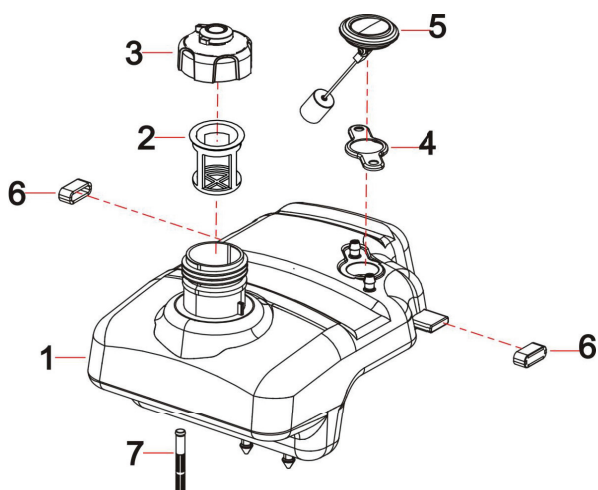


Muffler Side Cover

INV-2000G-3-1	SILENCER SIDE COVER
INV-2000G-3-2	NON-STANDARD BOLT
INV-2000G-3-3	CLIP NUT
INV-2000G-3-4	JOINT SHOCK ABSORBER SLEEVE
INV-2000G-3-5	SPRING SNAP RING

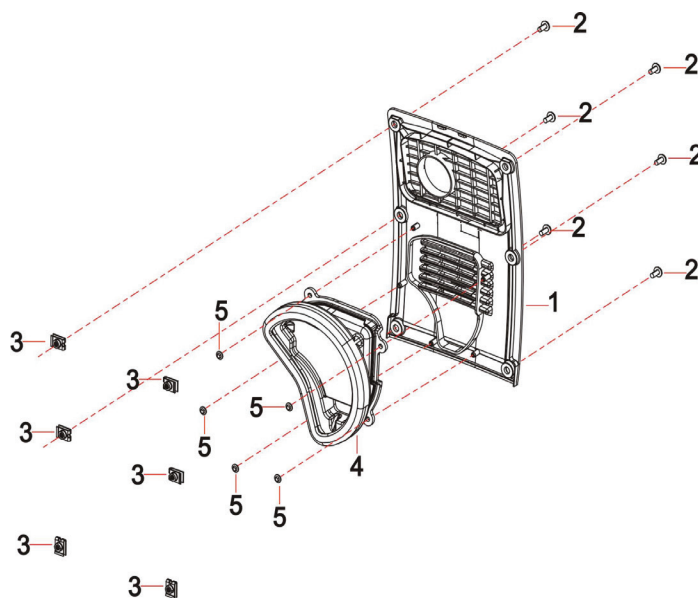



INV-2000 GENERATOR CONT'D

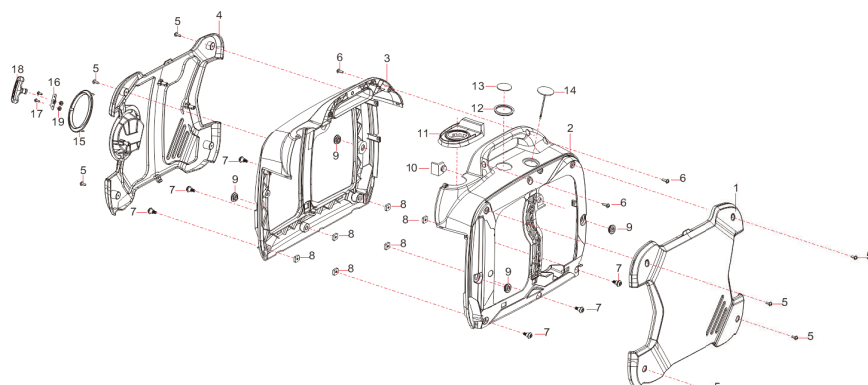


Shell Assy

INV-2000G-4-1	RIGHT EXTERIOR COVER
INV-2000G-4-2	RIGHT SHELL
INV-2000G-4-3	LEFT SHELL
INV-2000G-4-4	LEFT EXTERIOR COVER
INV-2000G-4-5	NON-STANDARD BOLT
INV-2000G-4-6	CROSS GROOVED DISC HEAD SCREW
INV-2000G-4-7	NON-STANDARD BOLT
INV-2000G-4-8	SQUARE NUT
INV-2000G-4-9	FUEL TANK SUPPORT RUBBER SLEEVE
INV-2000G-4-10	BUFFER CUSHION UPPER SUSPENSION
INV-2000G-4-11	OIL INJECTION NOZZLE RUBBER SLEEVE
INV-2000G-4-12	RUBBER SHEATH
INV-2000G-4-13	OIL-MARKED GLASS WINDOW
INV-2000G-4-14	RUBBER SHEATH
INV-2000G-4-15	LEFT TRIM PANEL
INV-2000G-4-16	STARTING ROPE GUIDE PLATE
INV-2000G-4-17	CROSS GROOVED DISC HEAD SCREW
INV-2000G-4-18	STARTING ROPE HANDLE
INV-2000G-4-19	HEXAGON FLANGE NUTS

Baseplate Assy

INV-2000G-5-1	BASEPLATE
INV-2000G-5-2	BOLT
INV-2000G-5-3	SEAT,FRAME
INV-2000G-5-4	SEAT,FRAME
INV-2000G-5-5	NUT
INV-2000G-5-6	NUT
INV-2000G-5-7	SEAT,FRAME
INV-2000G-5-8	BOLT
INV-2000G-5-9	BUFFER CUSHION SUPPORT
INV-2000G-5-10	BUFFER CUSHION SUPPORT
INV-2000G-5-11	INVERTER MOUNTING FRAME
INV-2000G-5-12	INVERTER
INV-2000G-5-15	SLEEVE, FUEL TANK RUBBER
INV-2000G-5-16	SLEEVE, FUEL TANK RUBBER


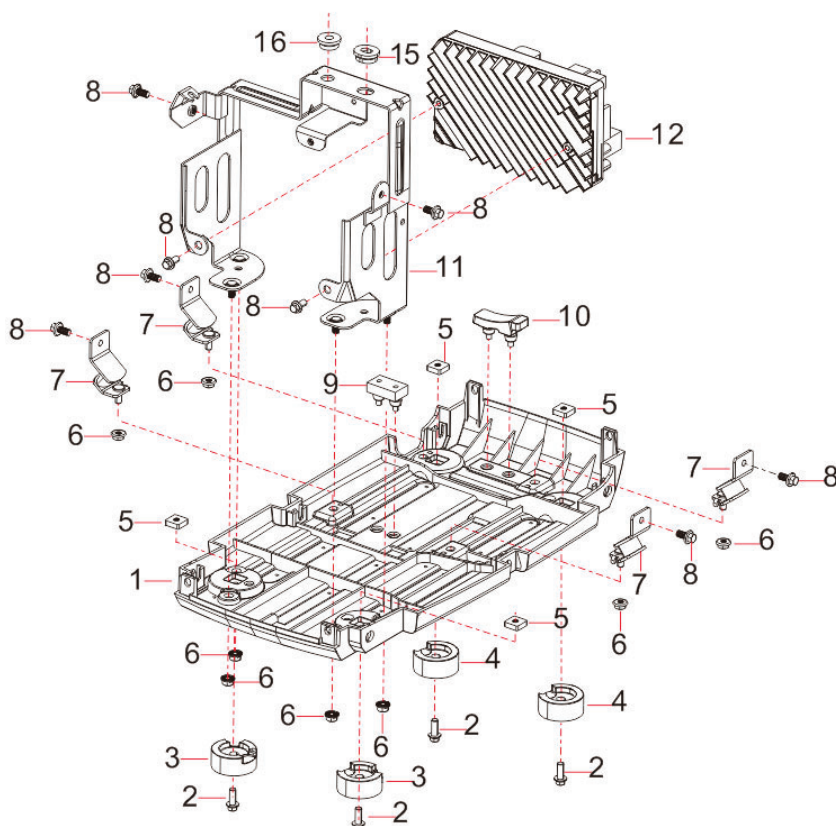




INV-2000 GENERATOR CONT'D


Control Panel Assy

INV-2000G-6-1	CONTROL PANEL .ASSY
INV-2000G-6-2	CROSS GROOVED SMALL DISC HEAD SCREW
INV-2000G-6-3	PANEL HOLDER
INV-2000G-6-4	SWITCH ASSY
INV-2000G-6-5	TUBE, FUEL
INV-2000G-6-6	TUBE, FUEL

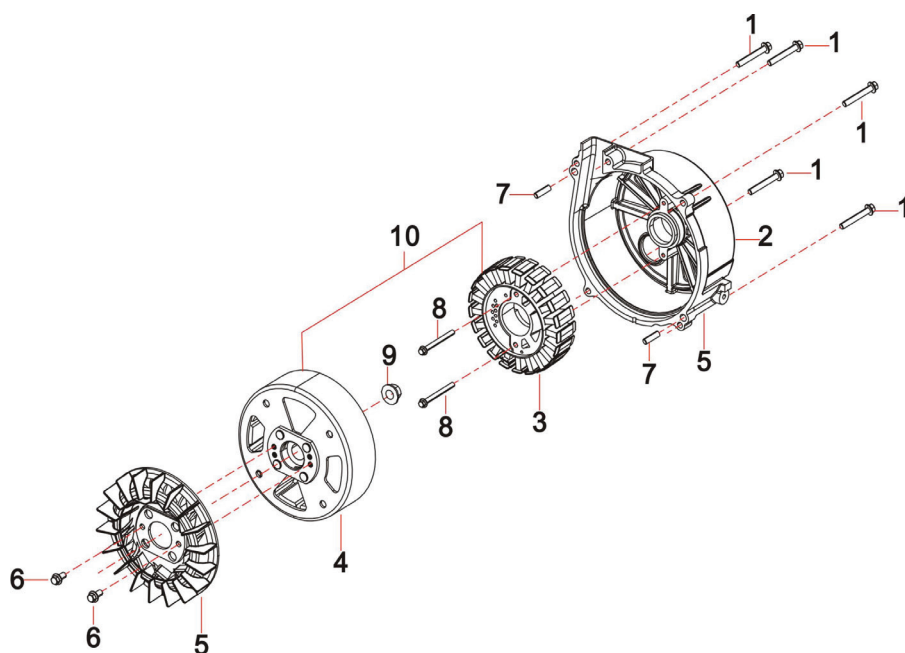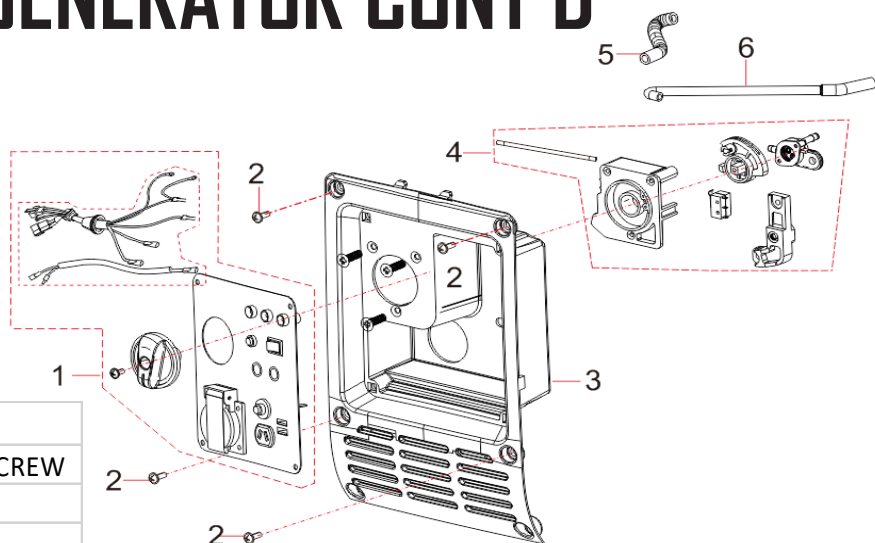

Motor Assy


INV-2000G-7-1	BOLT
INV-2000G-7-2	SHROUD, MOTOR
INV-2000G-7-3	STATOR COMP.
INV-2000G-7-4	ROTOR COMP
INV-2000G-7-5	IMPELLER
INV-2000G-7-6	BOLT
INV-2000G-7-7	PIN
INV-2000G-7-8	BOLT
INV-2000G-7-9	NUT
INV-2000G-7-10	MOTOR ASSY

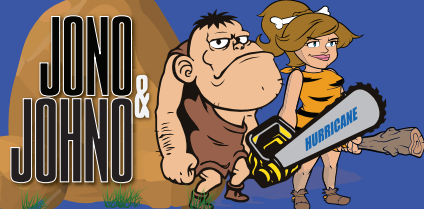


INV-2000 ENGINE

Head Sub Assy

INV-2000E-1-1	GASKET, CYLINDER HEAD
INV-2000E-1-2	HEAD SUBASSEMBLY, CYLINDER
INV-2000E-1-3	PIN
INV-2000E-1-4	STUD
INV-2000E-1-5	STUD
INV-2000E-1-6	PLUG, SPARK
INV-2000E-1-7	BOLT, CYLINDER HEAD
INV-2000E-1-8	GASKET, CYLINDER HEAD COVER
INV-2000E-1-9	PIECE, BREATH
INV-2000E-1-10	GASKET, BREATH GROOVE
INV-2000E-1-11	COVER SUBASSEMBLY, CYLINDER HEAD
INV-2000E-1-12	BOLT
INV-2000E-1-13	SCREW
INV-2000E-1-14	TUBE, BREATHER

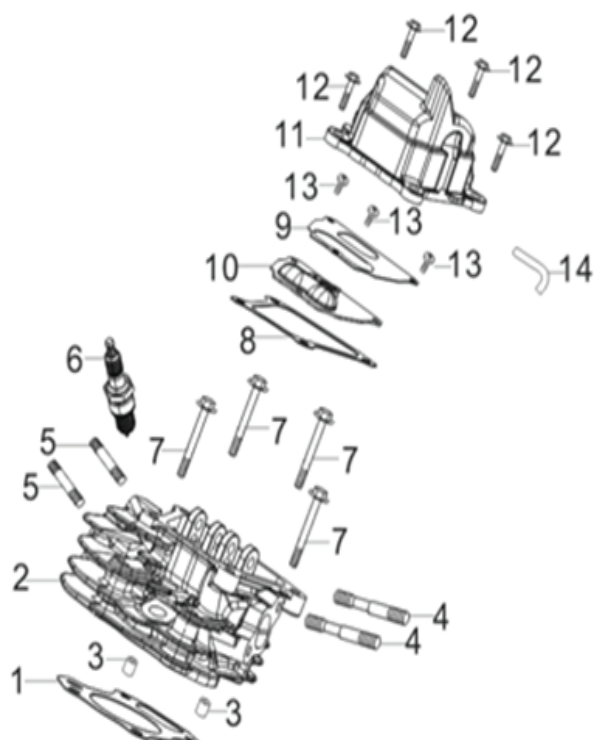


Crankcase/Cover Sub Assy

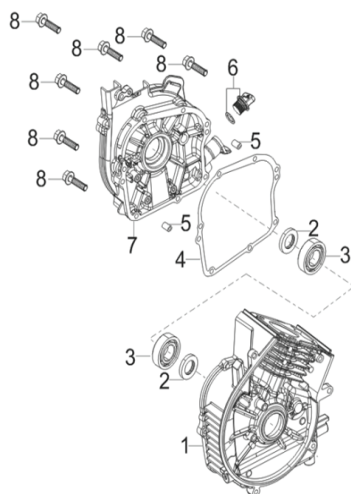

INV-2000E-2-1	CRANKCASE SUBASSEMBLY.
INV-2000E-2-2	OIL-SEAL
INV-2000E-2-3	BEARING
INV-2000E-2-4	GASKET, CRANKCASE
INV-2000E-2-5	PIN
INV-2000E-2-6	PLUG SUBASSEMBLY, ENGINE OIL
INV-2000E-2-7	COVER, CRANKCASE
INV-2000E-2-8	BOLT

Ring Set/Crankshaft Assy


INV-2000E-3-1	CRANKSHAFT ASSY.
INV-2000E-3-2	ROD, CONNECTING
INV-2000E-3-3	PISTON
INV-2000E-3-4	CLIP, PISTON PIN
INV-2000E-3-5	PIN, PISTON
INV-2000E-3-6	RING ASSY, PISTON

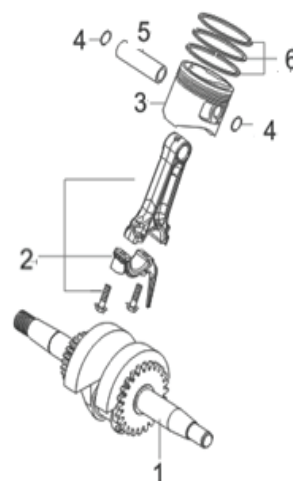



INV-2000 ENGINE CONT'D


Valves/Camshaft Sub Assy

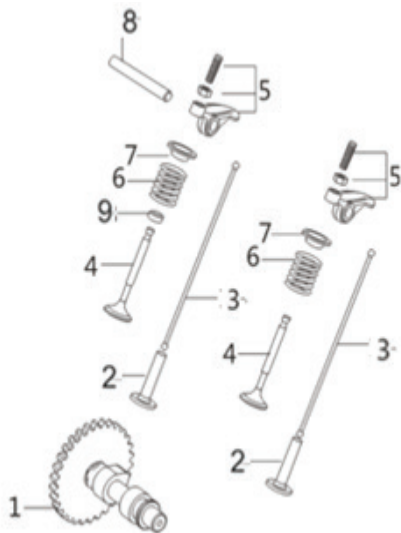


INV-2000E-4-1	CAMSHAFT ASSY.
INV-2000E-4-2	TAPPET, VALVE
INV-2000E-4-3	LIFTER, VALVE
INV-2000E-4-4	VALVE SET
INV-2000E-4-5	ROCKER SUBASSEMBLY, VALVE
INV-2000E-4-6	SPRING, VALVE
INV-2000E-4-7	SEAT, VALVE SPRING
INV-2000E-4-8	SHAFT, VALVE ROCKER
INV-2000E-4-9	GUIDE, SEAL

Recoil Starter Assy

INV-2000E-5-1	STARTER ASSY, RECOIL
INV-2000E-5-2	BOLT
INV-2000E-5-3	NUT
INV-2000E-5-4	AIR DEFLECTOR, CYLINDER HEAD
INV-2000E-5-5	BAYONET LOCK

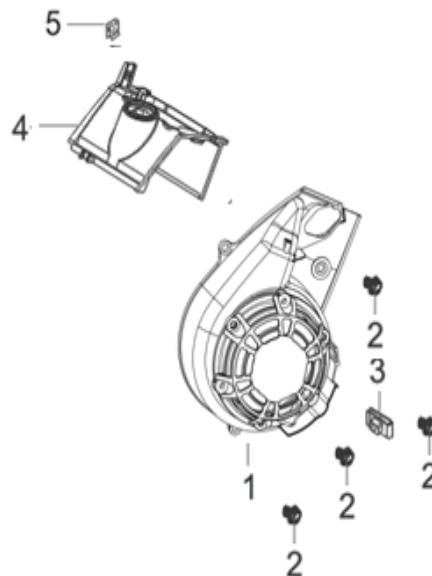

Carburetor Assy

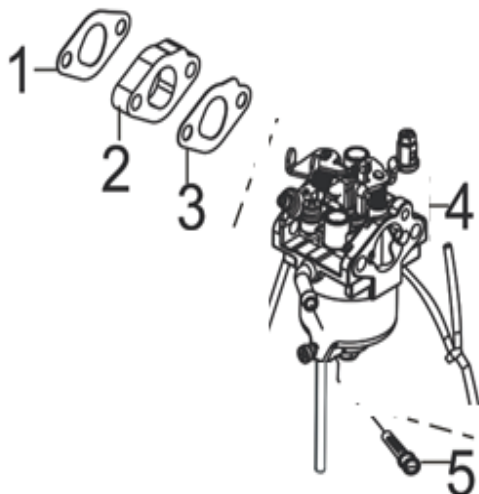


INV-2000E-6-1	GASKET, CARBURETOR
INV-2000E-6-2	PLATE, CARBURETOR INSULATOR
INV-2000E-6-3	GASKET, CARBURETOR INSULATOR
INV-2000E-6-4	CARBURETOR ASSY.
INV-2000E-6-5	FUEL FILTER



INV-2000 ENGINE CONT'D

Air Filter Assy

INV-2000E-7-1	CLEANER, AIR
INV-2000E-7-2	GASKET, AIR CLEANER
INV-2000E-7-3	NUT
INV-2000E-7-4	BOLT
INV-2000E-7-5	BOLT

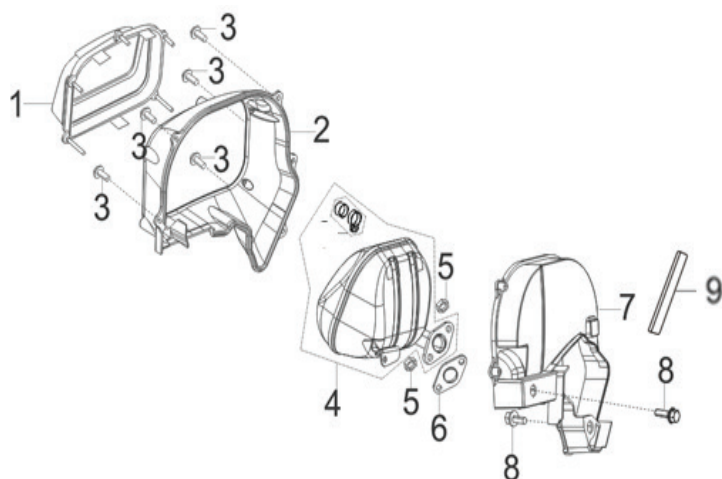

Muffler Assy

INV-2000E-8-1	COVER, MUFFLER SIDE
INV-2000E-8-2	SHROUD, MUFFLER
INV-2000E-8-3	SCREW, CROSS GROOVE PAN
INV-2000E-8-4	MUFFLER ASSY.
INV-2000E-8-5	
INV-2000E-8-6	GASKET, EXHAUST OUTLET
INV-2000E-8-7	MUFFLER SHIELD
INV-2000E-8-8	BOLT
INV-2000E-8-9	COVER, GASKET

Flywheel/Impeller/Starter Pulley/Ignition Coil

INV-2000E-9-1	NUT, FLYWHEEL
INV-2000E-9-2	FLYWHEEL SUBASSEMBLY
INV-2000E-9-3	BOLT
INV-2000E-9-4	IGNITOR
INV-2000E-9-5	SENSOR, ENGINE OIL
INV-2000E-9-6	BOLT
INV-2000E-9-7	CLAMP
INV-2000E-9-8	BOLT
INV-2000E-9-9	COIL, IGNITION
INV-2000E-9-10	BOLT

