



INV-4000 4kW GENERATOR



Head Assy

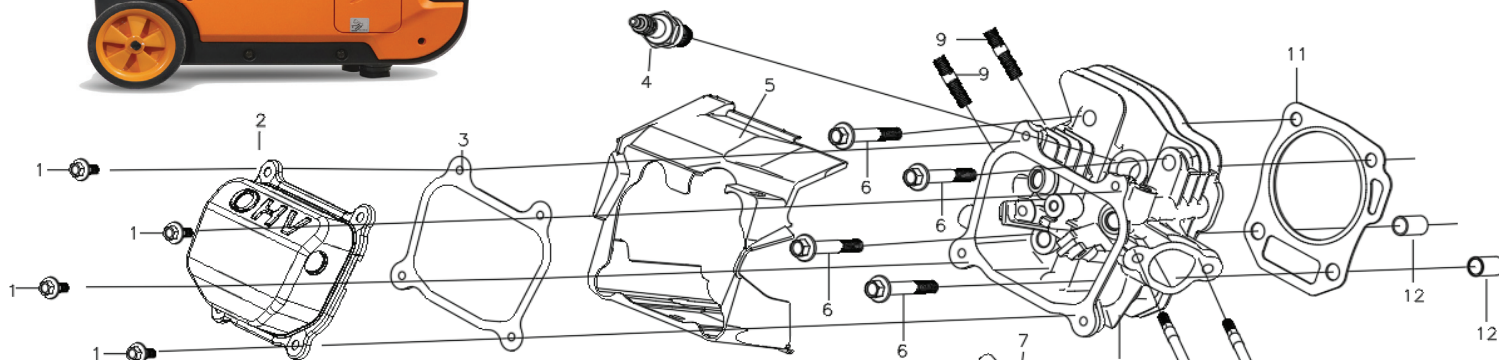

INV-4000-E04-1	BOLT
INV-4000-E04-2	COVER SUBASSEMBLY, CYLINDER HEAD
INV-4000-E04-3	GASKET, CYLINDER HEAD COVER
INV-4000-E04-4	PLUG, SPARK
INV-4000-E04-5	WIND SHIELD, CYLINDER
INV-4000-E04-6	BOLT
INV-4000-E04-7	TUBE, BREATHER
INV-4000-E04-8	HEAD SUBASSEMBLY, CYLINDER
INV-4000-E04-9	STUD
INV-4000-E04-10	STUD
INV-4000-E04-11	GASKET, CYLINDER HEAD
INV-4000-E04-12	PIN

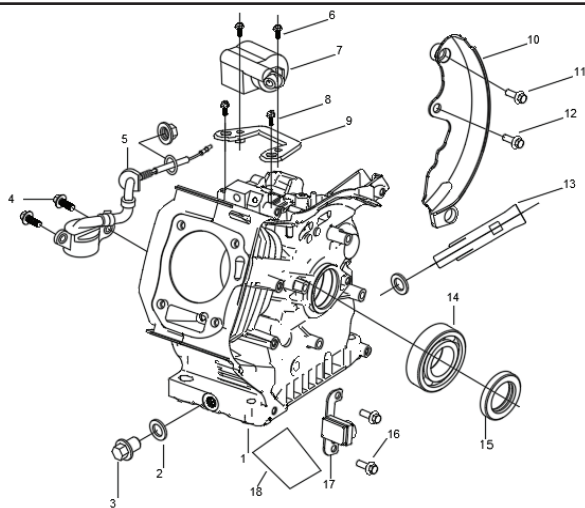


INV-4000-E17-1	CRANKCASE SUBASSEMBLY.
INV-4000-E17-2	FLAT WASHER
INV-4000-E17-3	BOLT
INV-4000-E17-4	BOLT
INV-4000-E17-5	OIL SENSOR
INV-4000-E17-6	BOLT
INV-4000-E17-7	IGNITION COILS
INV-4000-E17-8	BOLT
INV-4000-E17-9	COIL SUPPORT, IGNITION
INV-4000-E17-10	REAR SHIELD
INV-4000-E17-11	BOLT
INV-4000-E17-12	BOLT
INV-4000-E17-13	OIL DRAIN PIPE
INV-4000-E17-14	BEARING
INV-4000-E17-15	OIL-SEAL
INV-4000-E17-16	BOLT
INV-4000-E17-17	TRIGGER ,ASSY
INV-4000-E17-18	INSULATION

Crankcase Assy


Cover Sub Assy

INV-4000-E01-1	BOLT
INV-4000-E01-2	OIL-SEAL
INV-4000-E01-3	COVER, CRANKCASE
INV-4000-E01-4	OIL DIPSTICK
INV-4000-E01-5	PIN
INV-4000-E01-6	BEARING
INV-4000-E01-7	GASKET, CRANKCASE

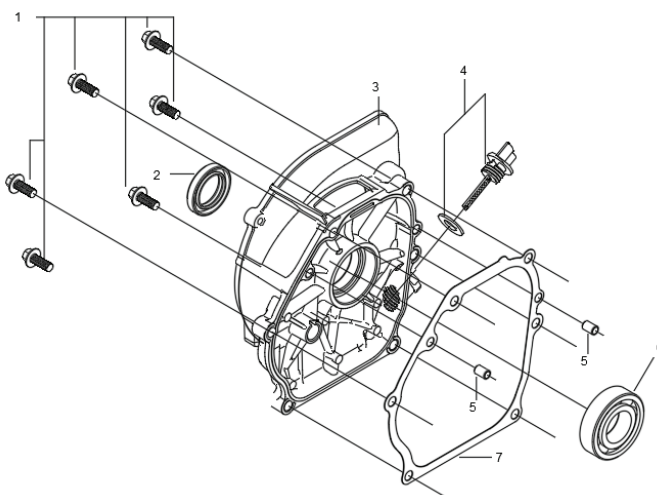



INV-4000 CONTINUED

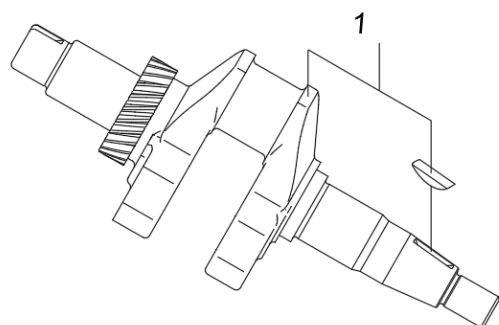


Crankshaft Assy


INV-4000-E03-1	CRANKSHAFT ASSY.
----------------	------------------

Piston Ring Set

INV-4000-E03-1	PISTON RING
INV-4000-E03-2	PISTON
INV-4000-E03-3	CLIP, PISTON PIN
INV-4000-E03-4	PIN, PISTON
INV-4000-E03-5	ROD, CONNECTING

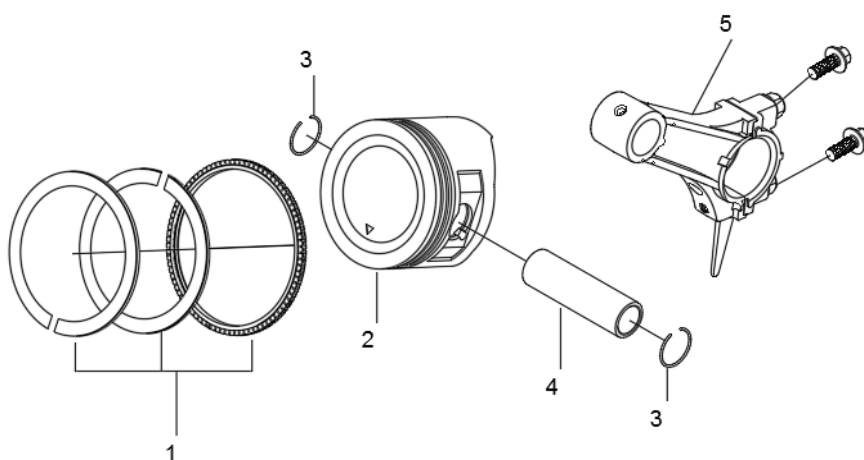


Valve/Camshaft Sub Assy

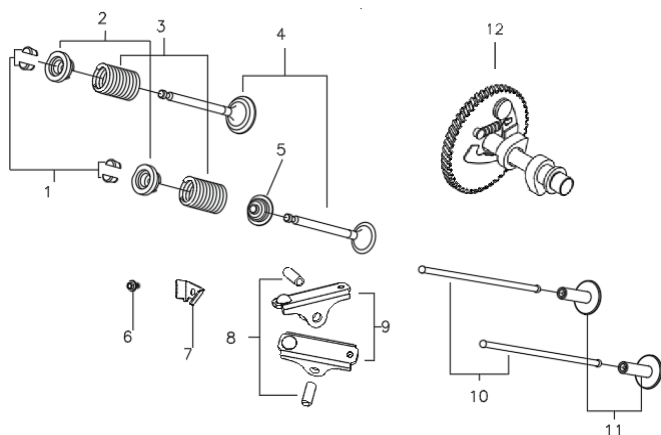

INV-4000-E05-1	VALVE LOCK CLIP
INV-4000-E05-2	SEAT, VALVE SPRING
INV-4000-E05-3	SPRING, VALVE
INV-4000-E05-4	VALVE SET
INV-4000-E05-5	GUIDE, SEAL
INV-4000-E05-6	BOLT
INV-4000-E05-7	ROCKER SHAFT LIMIT BLOCK
INV-4000-E05-8	SHAFT, VALVE ROCKER
INV-4000-E05-9	ROCKER SUBASSEMBLY, VALVE
INV-4000-E05-10	LIFTER, VALVE
INV-4000-E05-11	TAPPET, VALVE
INV-4000-E05-12	CAMSHAFT ASSY.


Recoil Starter

INV-4000-E08-1	STARTER CUP
INV-4000-E08-2	BOLT
INV-4000-E08-3	STARTER ASSY, RECOIL
INV-4000-E08-4	BOLT

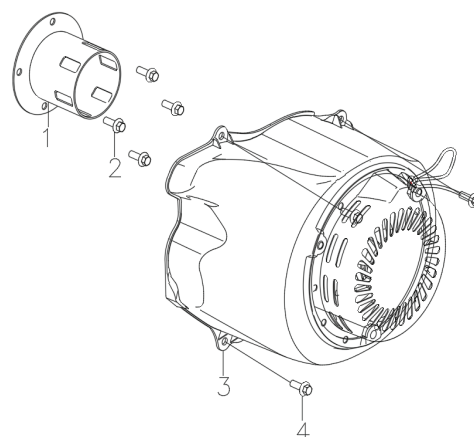



INV-4000 CONTINUED


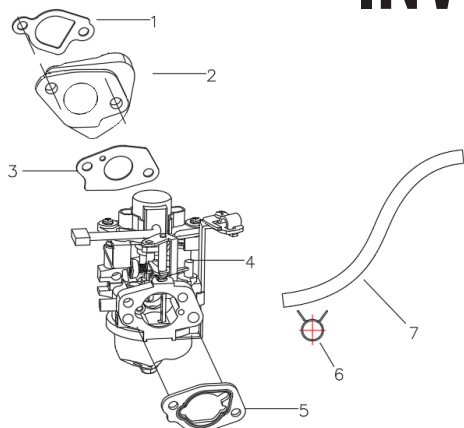


Carburettor Assy

INV-4000-E11-1	GASKET, CARBURETOR
INV-4000-E11-2	PLATE, CARBURETOR INSULATOR
INV-4000-E11-3	GASKET, CARBURETOR INSULATOR
INV-4000-E11-4	CARBURETOR ASSY.
INV-4000-E11-5	GASKET, AIR CLEANER
INV-4000-E11-6	FUEL,TUBE
INV-4000-E11-7	PIPE CLAMP

Air Filter

INV-4000-F02-1	GASKET, AIR CLEANER
INV-4000-F02-2	BOLT
INV-4000-F02-3	CLEANER, AIR

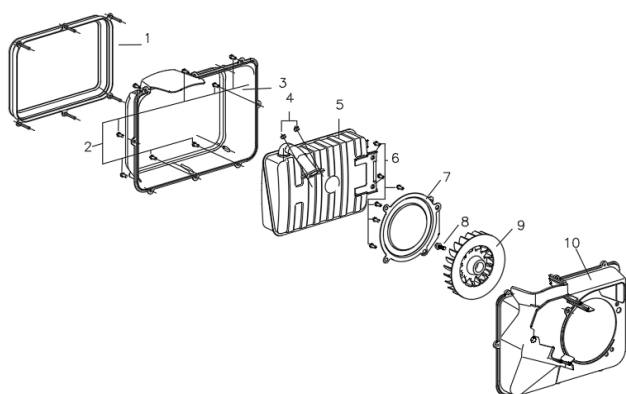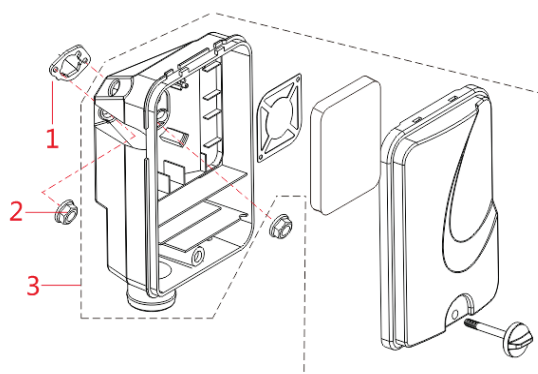


Muffler Assy

INV-4000-F04-1	SEAL,WIND GUIDE COVER
INV-4000-F04-2	SCREW
INV-4000-F04-3	SHROUD
INV-4000-F04-4	NUT
INV-4000-F04-5	MUFFLER ASSY.
INV-4000-F04-6	BOLT
INV-4000-F04-7	COVER
INV-4000-F04-8	BOLT
INV-4000-F04-9	IMPELLER
INV-4000-F04-10	INSULATION,MUFFLER

Flywheel/Impeller/Starter Pulley/ Ignition Coil


INV-4000-E15-1	STATOR COMP.
INV-4000-E15-2	BOLT
INV-4000-E15-3	ROTOR COMP
INV-4000-E15-4	BOLT
INV-4000-E15-5	IMPELLER
INV-4000-E15-6	BOLT
INV-4000-E15-7	TRIGGER COMBINATION

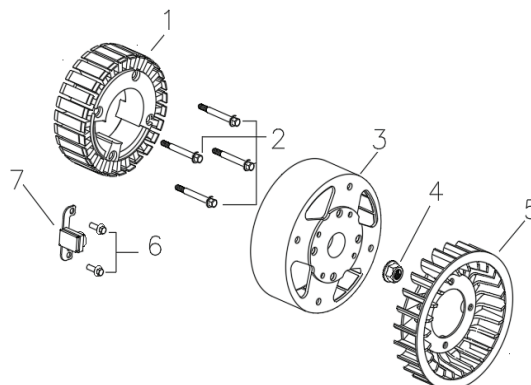



INV-4000 CONTINUED


Rack Assy

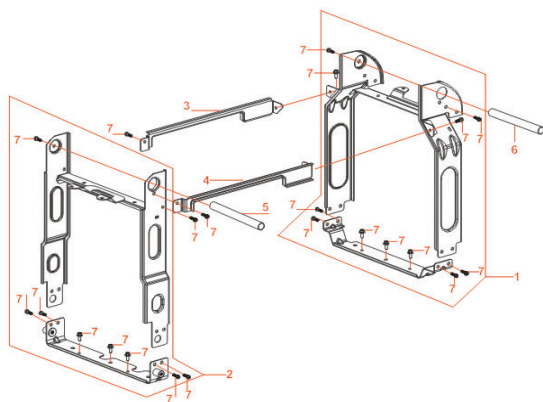


INV-4000-G01-1	RACK PARTS, REAR
INV-4000-G01-2	RACK PARTS, FRONT
INV-4000-G01-3	CONNECTION PLATE
INV-4000-G01-4	CONNECTION PLATE
INV-4000-G01-5	HANDLE
INV-4000-G01-6	HANDLE
INV-4000-G01-7	BOLT

Fuel Tank Assy

INV-4000-G02-1	TANK, FUEL
INV-4000-G02-2	COVER, FUEL TANK
INV-4000-G02-3	FUEL FILTER
INV-4000-G02-4	BOLT
INV-4000-G02-5	FLAT WASHERS
INV-4000-G02-6	BUSH
INV-4000-G02-7	FUEL TANK SUPPORT RUBBER SLEEVE

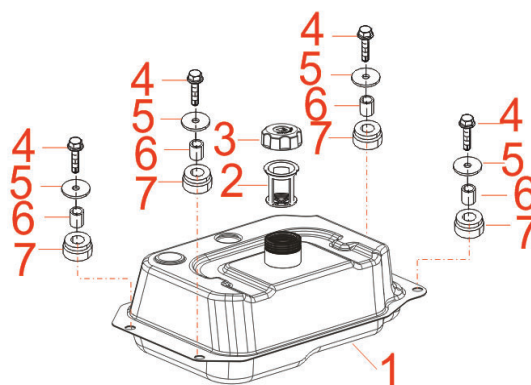


Control Panel Assy

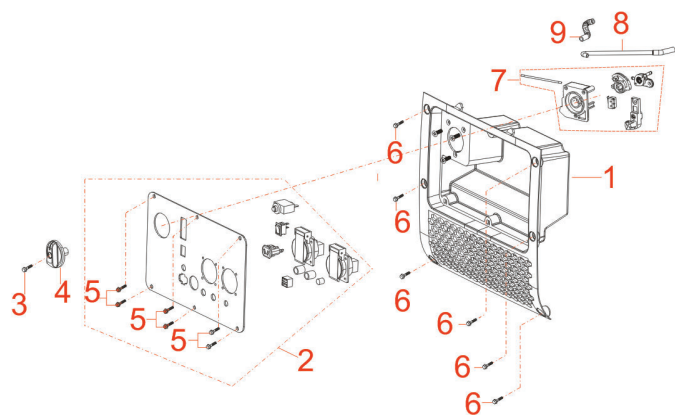


INV-4000-G03-1	CONTROL PANEL .ASSY
INV-4000-G03-2	PANEL HOLDER
INV-4000-G03-3	CROSS GROOVED DISC HEAD SCREW
INV-4000-G03-4	BOLT
INV-4000-G03-5	SWITCH ASSY
INV-4000-G03-6	TUBE, FUEL
INV-4000-G03-7	TUBE, FUEL

Inverter

INV-4000-G04-1	INVERTER
INV-4000-G04-2	RUBBER SHEATH
INV-4000-G04-3	BOLT
INV-4000-G04-4	NUT

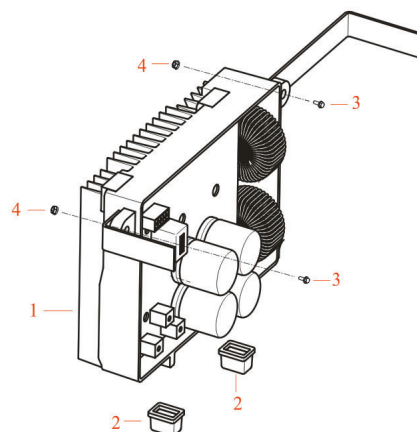


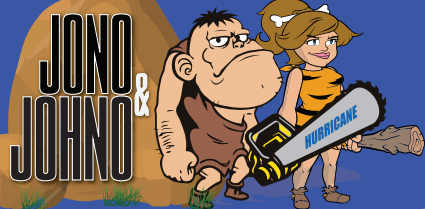

INV-4000 CONTINUED


Floor Assy

INV-4000-G05-1	BASEPLATE
INV-4000-G05-2	SEAT,FRAME
INV-4000-G05-3	SEAT,FRAME,LEFT
INV-4000-G05-4	SEAT,FRAME,RIGHT
INV-4000-G05-5	ENGINE support_left
INV-4000-G05-6	ENGINE support_right
INV-4000-G05-7	Nut
INV-4000-G05-8	NUT
INV-4000-G05-9	NUT
INV-4000-G05-10	BOLT
INV-4000-G05-11	BOLT

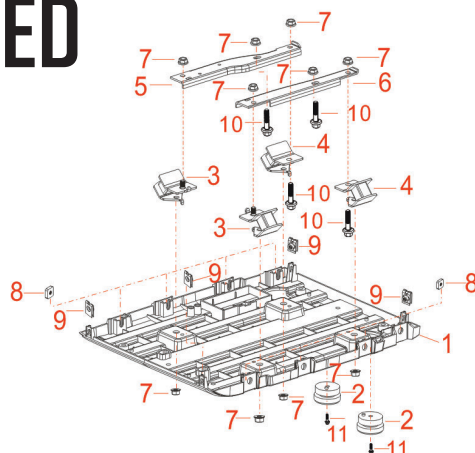

Shell Assy

INV-4000-G06-1	LEFT SHELL
INV-4000-G06-2	RIGHT SHELL
INV-4000-G06-3	LEFT EXTERIOR COVER
INV-4000-G06-4	RIGHT EXTERIOR COVER
INV-4000-G06-5	SILENCER SIDE COVER
INV-4000-G06-6	COVER,UPPER
INV-4000-G06-7	FRONT WHEEL
INV-4000-G06-8	AXLE
INV-4000-G06-9	DECORATIVE BOARD_LEFT
INV-4000-G06-10	COVER
INV-4000-G06-11	KNOB
INV-4000-G06-12	OIL INJECTION NOZZLE RUBBER SLEEVE
INV-4000-G06-13	OIL-MARKED GLASS WINDOW
INV-4000-G06-14	RUBBER SHEATH
INV-4000-G06-15	BOLT
INV-4000-G06-16	BOLT
INV-4000-G06-17	NUT
INV-4000-G06-18	BOLT

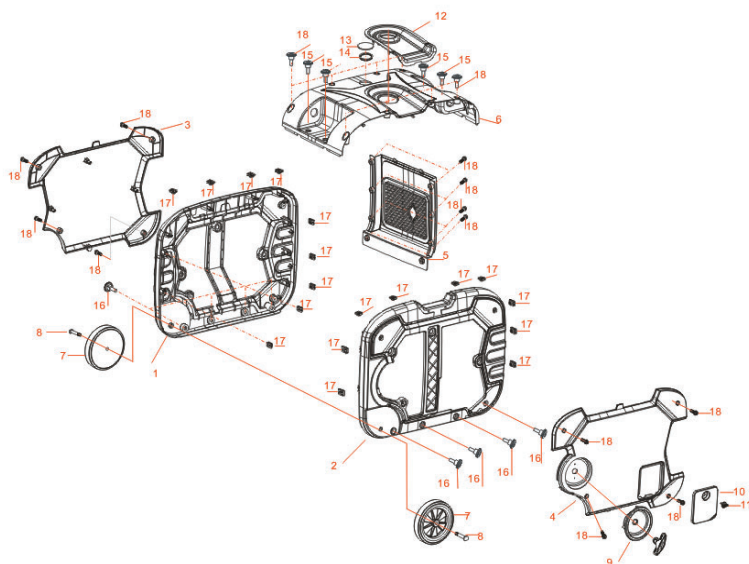

Rotating Arm Assy

INV-4000-G07-1	SHELL BAFFLE,LEFT
INV-4000-G07-2	SHELL BAFFLE,RIGHT
INV-4000-G07-3	SWING ARM_LEFT
INV-4000-G07-4	SWING ARM_RIGHT
INV-4000-G07-5	SWING BEAM_FRONT
INV-4000-G07-6	BAYONET LOCK
INV-4000-G07-7	BAYONET LOCK
INV-4000-G07-8	BAYONET BUCKS
INV-4000-G07-9	BAYONET BUCKS
INV-4000-G07-10	FRAME PARTS (FRONT FRAME)
INV-4000-G07-11	FRAME PARTS (REAR FRAME)
INV-4000-G07-12	SCREW
INV-4000-G07-13	BOLT
INV-4000-G07-14	SWING BEAM_REAR
INV-4000-G07-15	SCREW

