




# JPE1000HDF 33HP HORIZONTAL SHAFT ENGINE

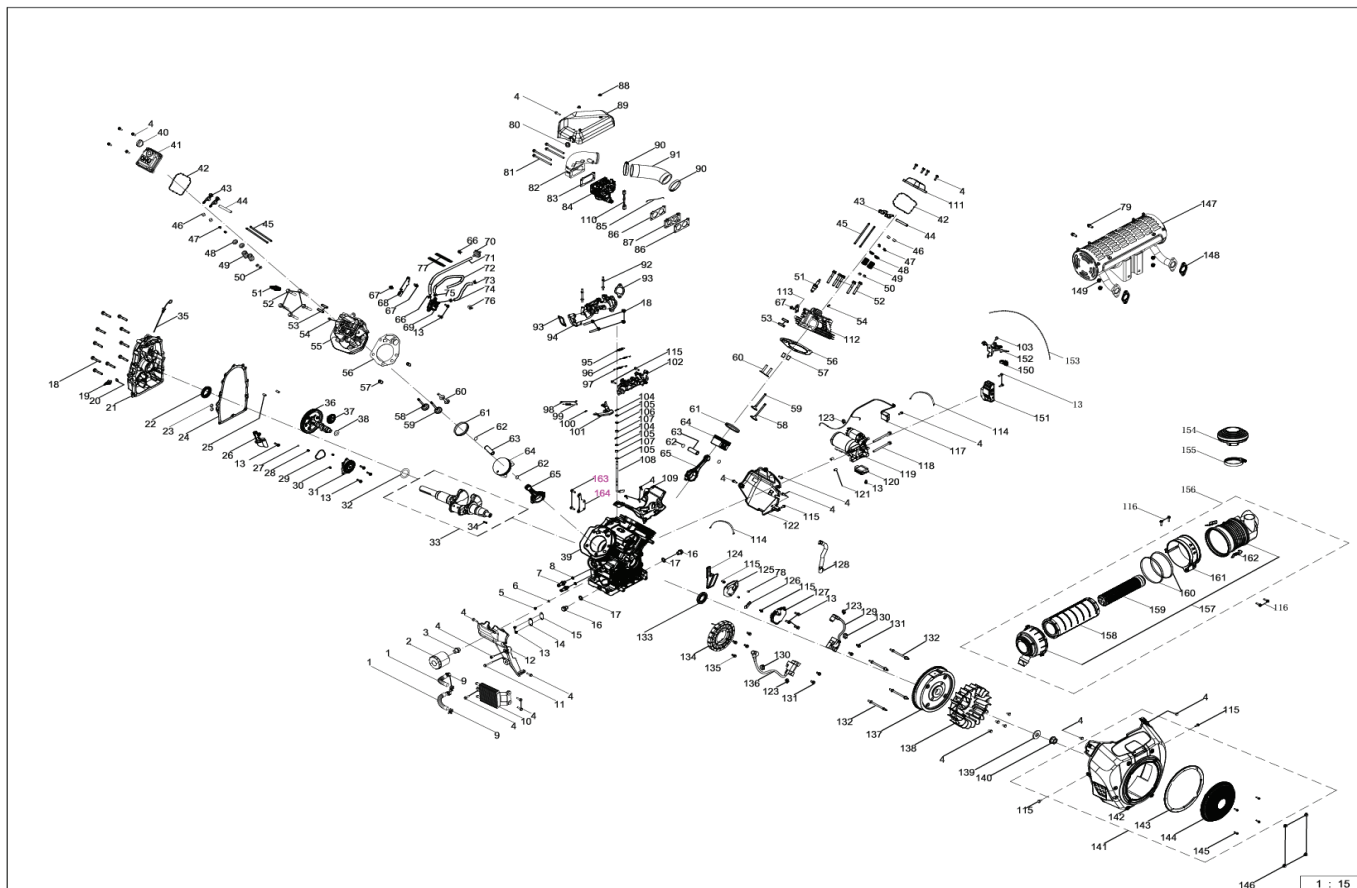

JPE1000HDF-001	Oil Hose ?9.5×?17.4×136
JPE1000HDF-002	Oil Filter
JPE1000HDF-003	Connection Pipe
JPE1000HDF-004	Bolt, M6×22
JPE1000HDF-005	Bolt, M5×10
JPE1000HDF-006	Washer, ?5.3×1×?10
JPE1000HDF-007	Oil Tube Joint
JPE1000HDF-008	Washer, ?10.5×2×?18
JPE1000HDF-009	Clamp
JPE1000HDF-010	Oil Radiator
JPE1000HDF-011	Bolt, M6×45
JPE1000HDF-012	Cylinder Head Baffle
JPE1000HDF-013	Bolt, M6×18
JPE1000HDF-014	Oil Duct Cover Plate
JPE1000HDF-015	Gasket
JPE1000HDF-016	Drain Bolt
JPE1000HDF-017	Washer, ?14×1.5×?22
JPE1000HDF-018	Bolt, M8×50
JPE1000HDF-019	Oil Pressure Sensor
JPE1000HDF-020	Washer, ?10.5×1.5×?18
JPE1000HDF-021	Crankcase Cover
JPE1000HDF-022	Oil Seal, ?42×?60×7
JPE1000HDF-023	O-Ring, ?11.2×2.65
JPE1000HDF-024	Gasket, Crankcase
JPE1000HDF-025	Pin, ?8×12
JPE1000HDF-026	Breather Filter Screen
JPE1000HDF-027	Steel Ball, ?9.5
JPE1000HDF-028	Oil Pump Spring
JPE1000HDF-029	Gasket, Oil Pump
JPE1000HDF-030	Pin, ?8×8

JPE1000HDF-031	Oil Pump
JPE1000HDF-032	Washer, ?45.5×1×?63
JPE1000HDF-033	Crankshaft
JPE1000HDF-034	Woodruff Key
JPE1000HDF-035	Dipstick
JPE1000HDF-036	Camshaft
JPE1000HDF-037	Governor Gear
JPE1000HDF-038	Washer, ?20×1×?30
JPE1000HDF-039	Crankcase
JPE1000HDF-040	Oil Plug
JPE1000HDF-041	Valve Cover
JPE1000HDF-042	Gasket, Valve Cover
JPE1000HDF-043	Rocker Arm Assembly
JPE1000HDF-044	Rocker Shaft
JPE1000HDF-045	Push Rod
JPE1000HDF-046	Valve Adjust Cap, Exhaust
JPE1000HDF-047	Valve Locker
JPE1000HDF-048	Valve Spring Seat
JPE1000HDF-049	Valve Spring
JPE1000HDF-050	Intake Valve Seal
JPE1000HDF-051	Spark Plug
JPE1000HDF-052	Bolt, M10×1.25×65
JPE1000HDF-053	Stud, M8×34
JPE1000HDF-054	Rocker Arm Pin
JPE1000HDF-055	Cylinder Head
JPE1000HDF-056	Gasket, Cylinder Head
JPE1000HDF-057	Pin, ?12×20
JPE1000HDF-058	Exhaust Valve
JPE1000HDF-059	Intake Valve
JPE1000HDF-060	Tappet



# JPE1000HDF 33HP CONTINUED

JPE1000HDF-061	Piston Ring Set
JPE1000HDF-062	Circlip
JPE1000HDF-063	Piston Pin
JPE1000HDF-064	Piston
JPE1000HDF-065	Connecting Rod Assembly
JPE1000HDF-066	Clamp
JPE1000HDF-067	Bolt, M8x14
JPE1000HDF-068	Fuel Pump Bracket
JPE1000HDF-069	Pulse Pump
JPE1000HDF-070	Fuel Filter
JPE1000HDF-071	Fuel Hose ?6.3x?12.5x400
JPE1000HDF-072	Fuel Hose
JPE1000HDF-073	Clamp
JPE1000HDF-074	Fuel Hose
JPE1000HDF-075	Clamp
JPE1000HDF-076	Clip
JPE1000HDF-077	Clip
JPE1000HDF-078	Pin, ?8x10
JPE1000HDF-079	Bolt, M8x20
JPE1000HDF-080	Spray Head Washer
JPE1000HDF-081	Bolt, M6x110
JPE1000HDF-082	Intake Manifold
JPE1000HDF-083	Gasket, Intake Manifold
JPE1000HDF-084	Carburetor
JPE1000HDF-085	Choke Lever
JPE1000HDF-086	Gasket, Carburetor
JPE1000HDF-087	Insulator
JPE1000HDF-088	Nut, M6
JPE1000HDF-089	Governor Shield
JPE1000HDF-090	Clamp
JPE1000HDF-091	Intake Tube
JPE1000HDF-092	Stud, M6x80
JPE1000HDF-093	Gasket, Intake Manifold
JPE1000HDF-094	Intake Manifold
JPE1000HDF-095	Choke Spring
JPE1000HDF-096	Governor Spring
JPE1000HDF-097	Governor Spring
JPE1000HDF-098	Throttle Linkage
JPE1000HDF-099	Idle Spring
JPE1000HDF-100	Choke Linkage Lock Clamp
JPE1000HDF-101	Governor Lever
JPE1000HDF-102	Governor Gear Bracket Assembly
JPE1000HDF-103	Bolt, M8x14
JPE1000HDF-104	Cotter Pin
JPE1000HDF-105	Washer, ?8.5x2x?15.8
JPE1000HDF-106	Oil Seal, ?8x?14x4
JPE1000HDF-107	Bearing, HK081210
JPE1000HDF-108	Governor Gear Shaft
JPE1000HDF-109	Cylinder Head Baffle
JPE1000HDF-110	Carburetor Wire
JPE1000HDF-111	Valve Cover
JPE1000HDF-112	Cylinder Head
JPE1000HDF-113	Lift Hook

JPE1000HDF-114	Tape, L=150mm
JPE1000HDF-115	Bolt, M6x14
JPE1000HDF-116	Bolt, M6x28
JPE1000HDF-117	Oil Sensor
JPE1000HDF-118	Bolt, M8x115
JPE1000HDF-119	Electric Starter
JPE1000HDF-120	Regulator
JPE1000HDF-121	Pin, ?10x12
JPE1000HDF-122	Cylinder Head Baffle
JPE1000HDF-123	Clamp
JPE1000HDF-124	Choke Plate
JPE1000HDF-125	Gasket, Breather Cover
JPE1000HDF-126	Breather Valve
JPE1000HDF-127	Breather Cover
JPE1000HDF-128	Breather Hose
JPE1000HDF-129	Right Hand Side Ignition Module
JPE1000HDF-130	Wire Jacket
JPE1000HDF-131	Bolt, M6x35
JPE1000HDF-132	Stud, M8x133
JPE1000HDF-133	Oil Seal, ?42x?60x7
JPE1000HDF-134	Charging Coil
JPE1000HDF-135	Bolt, M6x22
JPE1000HDF-136	Left Hand Side Ignition Module
JPE1000HDF-137	Flywheel
JPE1000HDF-138	Cooling Fan
JPE1000HDF-139	Washer, ?20x4.5x?50
JPE1000HDF-140	Nut, M20x1.5
JPE1000HDF-141	Blower Housing
JPE1000HDF-142	Blower Housing
JPE1000HDF-143	Decorative Cover
JPE1000HDF-144	Fix Shroud
JPE1000HDF-145	Bolt, M5x20
JPE1000HDF-146	Nut, M6
JPE1000HDF-147	Muffler
JPE1000HDF-148	Gasket, Muffler
JPE1000HDF-149	Nut, M8
JPE1000HDF-150	Throttle Lever Knob
JPE1000HDF-151	Switch Box
JPE1000HDF-152	Throttle Governor Lever
JPE1000HDF-153	Throttle Cable
JPE1000HDF-154	Air Filter Cover
JPE1000HDF-155	Clamp
JPE1000HDF-156	Air Filter Assembly
JPE1000HDF-157	Air Filter Assembly
JPE1000HDF-158	Air Filter Element
JPE1000HDF-159	Air Filter Element
JPE1000HDF-160	Gasket, Air Filter
JPE1000HDF-161	Air Filter Bracket
JPE1000HDF-162	Air Filter Clip
JPE1000HDF-163	Bolt, M6x12
JPE1000HDF-164	Motor Support Plate