




PBKK 65CC WHEELED BRUSHCUTTER

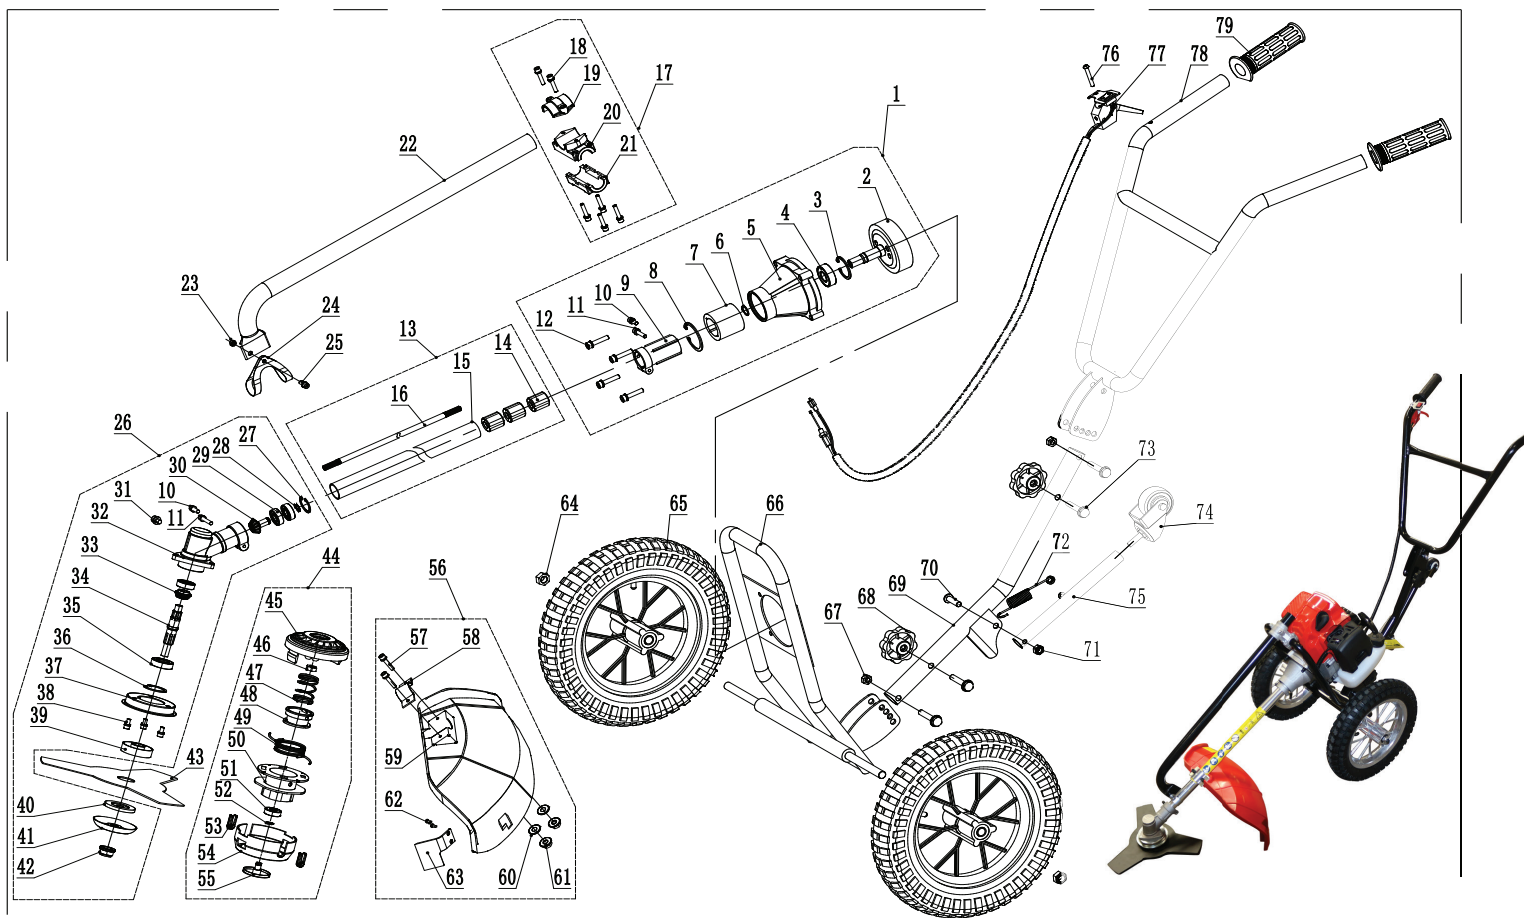

PBKK-001	reducer assy
PBKK-002	drum clutch
PBKK-003	ring snap
PBKK-004	bearing
PBKK-005	drive shaft cover
PBKK-006	ring snap
PBKK-007	rubber
PBKK-008	ring snap
PBKK-009	cover-clamp
PBKK-010	screw M5*14
PBKK-011	screw M5*25
PBKK-012	screw M6*28
PBKK-013	aluminium shaft assy
PBKK-014	oil bearing
PBKK-015	aluminium shaft
PBKK-016	transmission shaft
PBKK-017	fix support
PBKK-018	screw M5*25
PBKK-019	fix support upper plate
PBKK-020	fix support middle plate
PBKK-021	fix support lower plate
PBKK-022	fix shaft
PBKK-023	screw M5
PBKK-024	fix plate
PBKK-025	screw M5*14
PBKK-026	gear box assy
PBKK-027	ring snap
PBKK-028	snap
PBKK-029	bearing
PBKK-030	big gear

PBKK-031	screw
PBKK-032	gear box
PBKK-033	output gear 19T
PBKK-034	output gear 6T
PBKK-035	bearing
PBKK-036	ring snap
PBKK-037	blade plate support
PBKK-038	screw
PBKK-039	blade plate
PBKK-040	blade plate
PBKK-041	flange
PBKK-042	screw M10*1.25
PBKK-043	blade
PBKK-044	trimmer head
PBKK-045	trimmer head upper cover
PBKK-046	screw
PBKK-047	trimmer head spring
PBKK-048	rope seat
PBKK-049	rope
PBKK-050	rope support
PBKK-051	bearing
PBKK-052	snap
PBKK-053	trimmer head U inserts
PBKK-054	trimmer head cover
PBKK-055	trimmer head tip
PBKK-056	protector assy
PBKK-057	screw
PBKK-058	upper plate
PBKK-059	protector
PBKK-060	washer

PBKK-061	screw
PBKK-062	screw
PBKK-063	protector blade
PBKK-064	screw M12
PBKK-065	wheel
PBKK-066	wheel support
PBKK-067	screw M8
PBKK-068	knob
PBKK-069	fix link
PBKK-070	screw M6*30
PBKK-071	screw M6
PBKK-072	small wheel spring
PBKK-073	screw
PBKK-074	small wheel
PBKK-075	small wheel fix link
PBKK-076	screw M5*35
PBKK-077	switch assy
PBKK-078	handle
PBKK-079	handle rubber

THIS USES ENGINE JPETS65
CLICK HERE FOR ENGINE PARTS

PBKK