


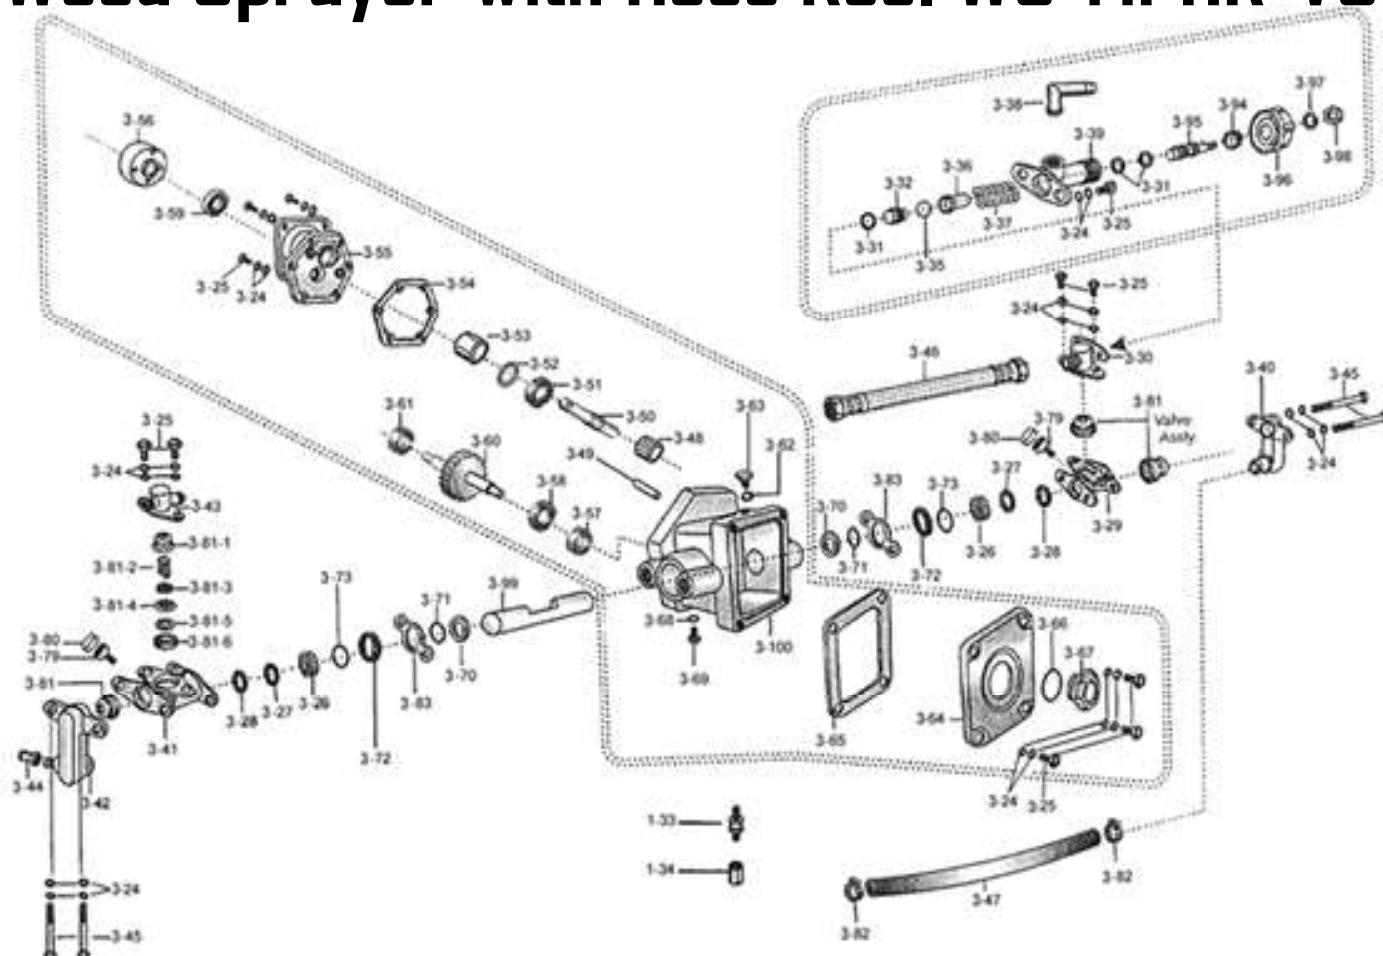


Weed Sprayer with Hose Reel WS-MPHR-V3




WS-MPHR-V3-1-11	Shake-proof plug 6mm
WS-MPHR-V3-1-12-1	Fixing bracket
WS-MPHR-V3-3-24	Washer
WS-MPHR-V3-3-25	Hex bolt M6x16
WS-MPHR-V3-3-26	Greasing
WS-MPHR-V3-3-27	V-packing
WS-MPHR-V3-3-28	Adjusting ring
WS-MPHR-V3-3-29	Right pressure chamber
WS-MPHR-V3-3-30	Right delivery chamber
WS-MPHR-V3-3-31	O-ring 10x1.8
WS-MPHR-V3-3-32	Valve seat
WS-MPHR-V3-1-33	Shake-proof plug 6mm
WS-MPHR-V3-1-34	Pump bracket
WS-MPHR-V3-3-35	Ball valve
WS-MPHR-V3-3-36	Spring seat
WS-MPHR-V3-3-37	Spring
WS-MPHR-V3-3-38	overflow joint
WS-MPHR-V3-3-39	Pressure regulating valve body
WS-MPHR-V3-3-40	Right suction chamber
WS-MPHR-V3-3-41	Left pressure chamber
WS-MPHR-V3-3-42	Left suction chamber
WS-MPHR-V3-3-43	Left delivery chamber
WS-MPHR-V3-3-44	Suction joint
WS-MPHR-V3-3-45	Hex bolt M6x73
WS-MPHR-V3-3-46	Pump delivery hose assy
WS-MPHR-V3-3-47	Pump suction hose
WS-MPHR-V3-3-48	Roller bearing
WS-MPHR-V3-3-49	Pin
WS-MPHR-V3-3-50	Pinion shaft
WS-MPHR-V3-3-51	Ball bearing 6201
WS-MPHR-V3-3-52	O-ring 12x1.8

WS-MPHR-V3-3-53	Bush
WS-MPHR-V3-3-54	Gasket, upper case
WS-MPHR-V3-3-55	Upper case
WS-MPHR-V3-3-56	Clutch drum
WS-MPHR-V3-3-57	Ball bearing 6200
WS-MPHR-V3-3-58	Ball bearing 6203
WS-MPHR-V3-3-59	Oil seal for upper case
WS-MPHR-V3-3-60	Gear shaft
WS-MPHR-V3-3-61	Ball bearing 608
WS-MPHR-V3-3-62	O-ring 12x1.8
WS-MPHR-V3-3-63	Oil inlet bolt
WS-MPHR-V3-3-64	Gear box cover
WS-MPHR-V3-3-65	O-ring, gear box cover
WS-MPHR-V3-3-66	O-ring, oil window 31x3
WS-MPHR-V3-3-67	Oil window
WS-MPHR-V3-3-68	O-ring 6.3x1.8
WS-MPHR-V3-3-69	Oil outlet bolt
WS-MPHR-V3-3-70	Oil seal for piston
WS-MPHR-V3-3-71	O-ring for piston 17x1.8
WS-MPHR-V3-3-72	Packing seat
WS-MPHR-V3-3-73	O-ring 18x2.65
WS-MPHR-V3-3-79	Grease cup
WS-MPHR-V3-3-80	Cap for grease cup
WS-MPHR-V3-3-81	Valve assembly
WS-MPHR-V3-3-81-1	Valve cage
WS-MPHR-V3-3-81-2	Valve spring
WS-MPHR-V3-3-81-3	Valve plug
WS-MPHR-V3-3-81-4	Valve seat
WS-MPHR-V3-3-81-5	Valve ring
WS-MPHR-V3-3-81-6	Valve packing
WS-MPHR-V3-3-82	Hose clamp

WS-MPHR-V3-3-83	Metal plate washer
WS-MPHR-V3-3-94	Cap nut
WS-MPHR-V3-3-95	Regulating screw
WS-MPHR-V3-3-96	Adjusting pan
WS-MPHR-V3-3-97	Washer
WS-MPHR-V3-3-98	Nut
WS-MPHR-V3-3-99	Piston
WS-MPHR-V3-3-100	Gear box body

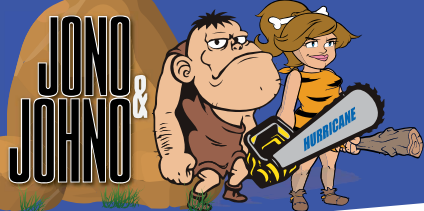


Weed Sprayer with Hose Reel WS-MPHR-V3

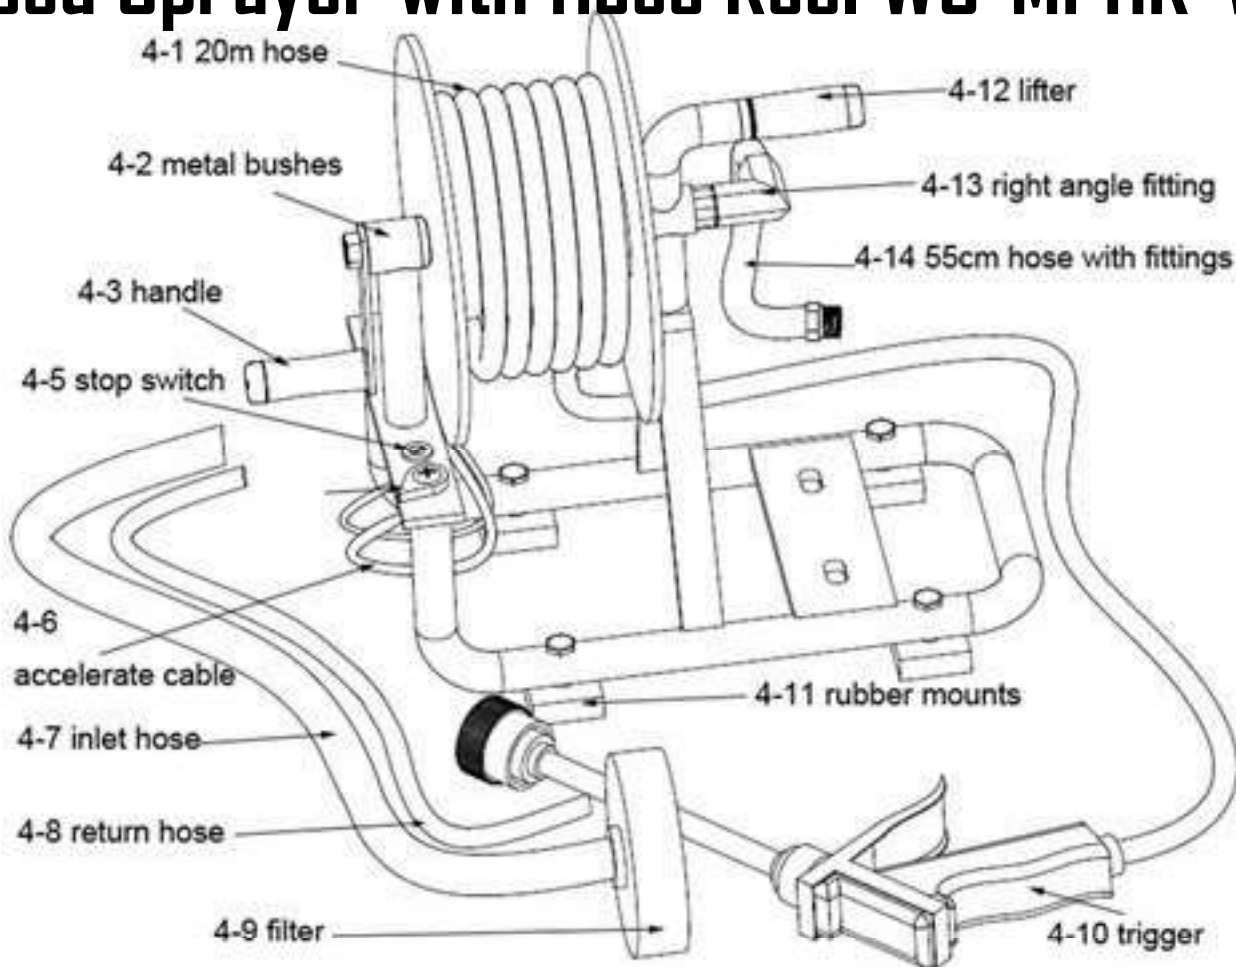

WS-MPHR-V3-4-1	20m hose
WS-MPHR-V3-4-2	metal bushes
WS-MPHR-V3-4-3	handle
WS-MPHR-V3-4-4	stop switch
WS-MPHR-V3-4-5	throttle lever
WS-MPHR-V3-4-6	accelerate cable
WS-MPHR-V3-4-7	inlet hose
WS-MPHR-V3-4-8	return hose
WS-MPHR-V3-4-9	filter
WS-MPHR-V3-4-10	spray gun
WS-MPHR-V3-4-11	rubber mounts
WS-MPHR-V3-4-12	lifter
WS-MPHR-V3-4-13	right angle fitting
WS-MPHR-V3-4-14	55cm hose with fittings



Weed Sprayer with Hose Reel WS-MPHR-V3

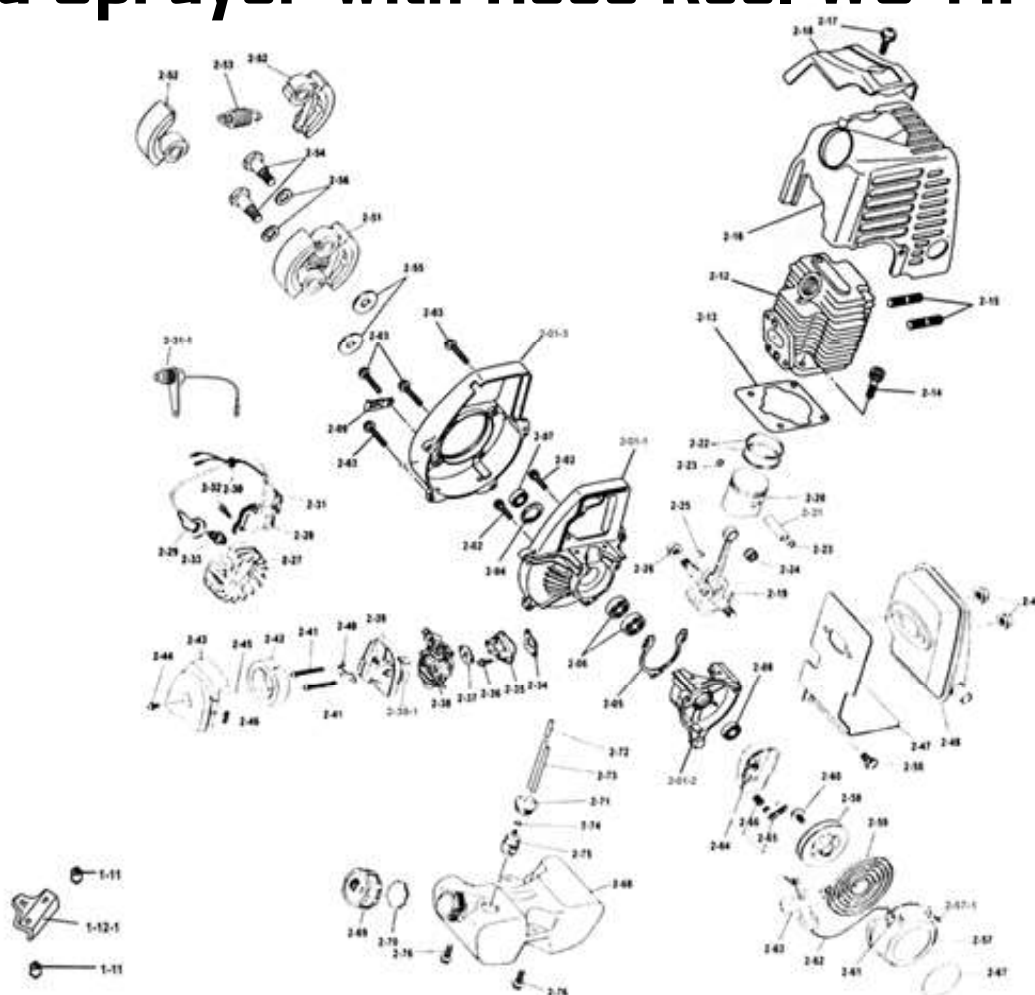

WS-MPHR-V3-E70 (1-9)	Starter Assey
WS-MPHR-V3-E10-13	Starter reel
WS-MPHR-V3-E14	oil seal 12*22*7
WS-MPHR-V3-E15	back Crank case
WS-MPHR-V3-E16	bearing 6201/p5
WS-MPHR-V3-E17	crank shaft comp
WS-MPHR-V3-E18	key 3x5x13
WS-MPHR-V3-E19	pin B4x10
WS-MPHR-V3-E20	front crank case
WS-MPHR-V3-E21	Flash pan
WS-MPHR-V3-E22	pin B4x10
WS-MPHR-V3-E23	screw M5x25
WS-MPHR-V3-E24	Magneto Rotor comp.
WS-MPHR-V3-E25	nut M8
WS-MPHR-V3-E26	Ignition coil comp.
WS-MPHR-V3-E27	cord comp
WS-MPHR-V3-E28	bolt M5x20
WS-MPHR-V3-E29	washer B
WS-MPHR-V3-E30	spring
WS-MPHR-V3-E31	expander
WS-MPHR-V3-E32	washer
WS-MPHR-V3-E33	screw pin
WS-MPHR-V3-E34	fan cover
WS-MPHR-V3-E35	bolt M5x16
WS-MPHR-V3-E36	clip
WS-MPHR-V3-E37	bearing
WS-MPHR-V3-E38	ring
WS-MPHR-V3-E39	piston
WS-MPHR-V3-E40	piston pin
WS-MPHR-V3-E41	gasket
WS-MPHR-V3-E42	piston ring

WS-MPHR-V3-E43	gasket
WS-MPHR-V3-E44	Cylinder
WS-MPHR-V3-E45	screw M5x8
WS-MPHR-V3-E46	guide cover assy
WS-MPHR-V3-E47	spark plug
WS-MPHR-V3-E48	spring
WS-MPHR-V3-E49	plug cap
WS-MPHR-V3-E50	cap
WS-MPHR-V3-E51	plug
WS-MPHR-V3-E52	cover
WS-MPHR-V3-E53	screw M5x20
WS-MPHR-V3-E54	gasket
WS-MPHR-V3-E55	muffler
WS-MPHR-V3-E56	screw M5x20
WS-MPHR-V3-E57	screw M5x14
WS-MPHR-V3-E59	screw M5x45
WS-MPHR-V3-E60	muffler cover
WS-MPHR-V3-E61	gasket
WS-MPHR-V3-E62	admitting pipe
WS-MPHR-V3-E63	gasket
WS-MPHR-V3-E64	Carburetor assy
WS-MPHR-V3-E65	choker handler
WS-MPHR-V3-E66	pin
WS-MPHR-V3-E67	stop ring
WS-MPHR-V3-E68	cleaner insider cover
WS-MPHR-V3-E69	screw M5x50
WS-MPHR-V3-E71	choker
WS-MPHR-V3-E72	screw ST4.2x12
WS-MPHR-V3-E73	fil ter
WS-MPHR-V3-E74	cleaner outer cover
WS-MPHR-V3-E75	screw

WS-MPHR-V3-E76	screw M5x16
WS-MPHR-V3-E77	cleaner cover
WS-MPHR-V3-E78	fuel pipe
WS-MPHR-V3-E79	plug
WS-MPHR-V3-E80	fuel pipe
WS-MPHR-V3-E81	fuel tank
WS-MPHR-V3-E82	fuel tank lid
WS-MPHR-V3-E83	gasket
WS-MPHR-V3-E84	airscoop
WS-MPHR-V3-E85	inside cover
WS-MPHR-V3-E86	casing
WS-MPHR-V3-E87	chain
WS-MPHR-V3-E88	lid assy
WS-MPHR-V3-E89	stand
WS-MPHR-V3-E90	rubber cover