


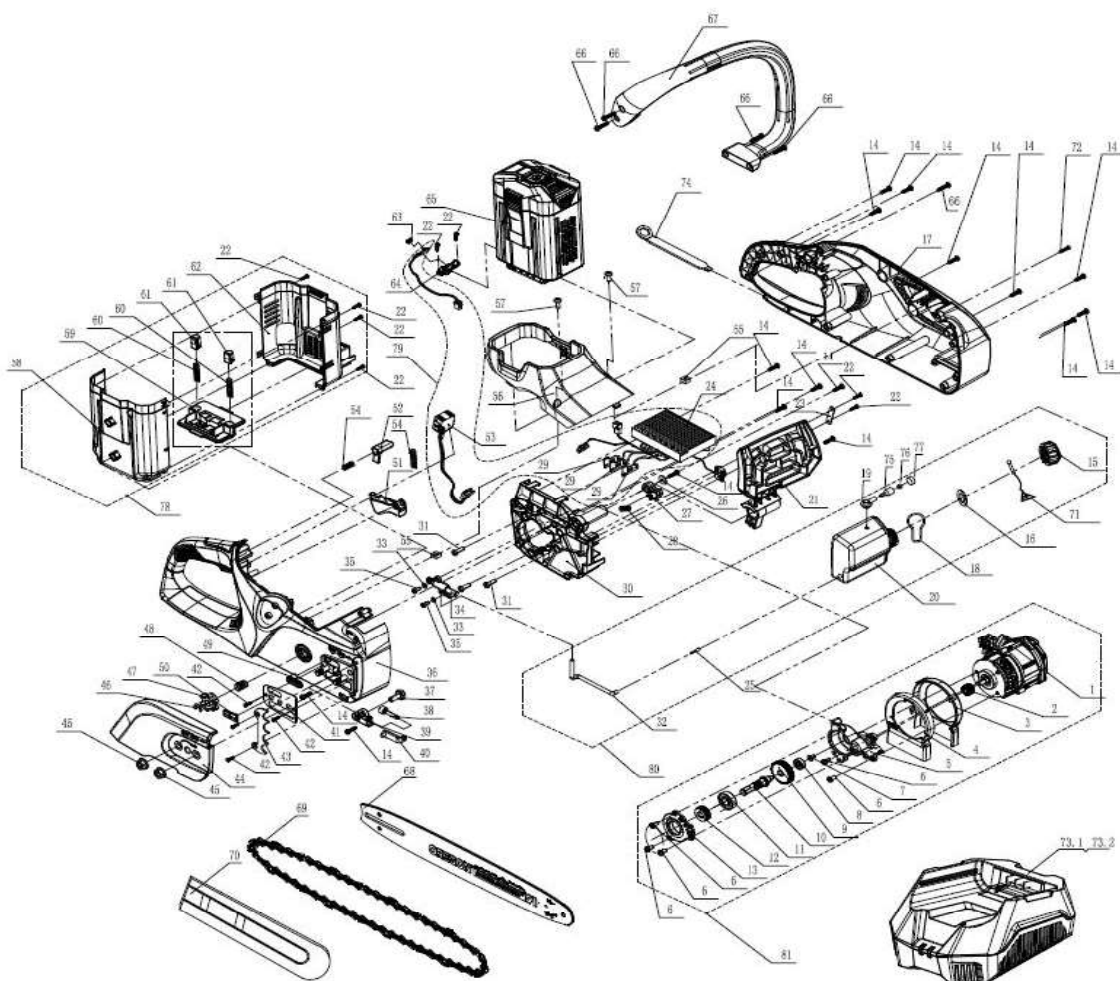

ZOMAX Electric 52v Chainsaw ZMDC501



1	C501 motor (7037)
2 ZMDC501-2	13 teeth gear
3	air director A
4	air director B
5	gear case
6 ZMDC501-6	screw M5*10
7	screw M5*8
8	06-2RS bearing
9	36 teeth gear
10	output shaft
11	001-2RS bearing
12 ZMDC501-12	worm
13 ZMDC501-13	gear case cover
14 ZMDC501-14	screw st3. 9*16
15 ZMDC501-15	oil pot cap
16 ZMDC501-16	gasket
17 ZMDC501-17	left cover
18 ZMDC501-18	oil tank seal
19 ZMDC501-19	breather pipe
20 ZMDC501-20	oil pot
21 ZMDC501-21	front hand guard
22 ZMDC501-22	screw st2. 9*12
23 ZMDC501-23	Switch plate
24 ZMDC501-24	controller (DH)
25 ZMDC501-25	oil filter
26 ZMDC501-26	washer
27 ZMDC501-27	Skip block
28 ZMDC501-28	brake spring
29 ZMDC501-29	plug
30 ZMDC501-30	motor mounting plate

31 ZMDC501-31	screw M5*16
32 ZMDC501-32	oil pipe
33 ZMDC501-33	washer
34 ZMDC501-34	oil pump
35 ZMDC501-35	screw M4*10
36 ZMDC501-36	right cover
37 ZMDC501-37	tension gear
38 ZMDC501-38	adjustment lever
39 ZMDC501-39	tension gear seat
40 ZMDC501-40	tension pin
41 ZMDC501-41	tension cover
42 ZMDC501-42	screw st3. 9*16
43 ZMDC501-43	Spiked bumper
44 ZMDC501-44	right plastic cover
45 ZMDC501-45	screw M5
46 ZMDC501-46	C7 open collar
47 ZMDC501-47	chain wheel
48 ZMDC501-48	tension spring
49 ZMDC501-49	oil outlet rubber
50 ZMDC501-50	rubber plate
51 ZMDC501-51	trigger
52 ZMDC501-52	reset button
53 ZMDC501-53	speed-control switch
54 ZMDC501-54	reset spring
55 ZMDC501-55	nut M5
56 ZMDC501-56	top cover
57 ZMDC501-57	screw M5*12
58 ZMDC501-58	Battery bunker A
59 ZMDC501-59	Battery bunker socket
60 ZMDC501-60	Battery bunker spring



ZOMAX Electric 52v Chainsaw ZMDC501

CONTINUED

61	ZMDC501-61	Socket spring
62	ZMDC501-62	Battery bunker B
63	ZMDC501-63	button
64	ZMDC501-64	button seat
65	ZMDC501-65	LB5140 battery pack
66	ZMDC501-66	screw st3. 9*20
67	ZMDC501-67	handle
68		guide bar
69		chain
70	ZMDC501-70	guide bar cover
71	ZMDC501-71	cap link
72		screw st2. 9*16
73.1		LC5120E charger
73.2		LC5120U charger
74	ZMDC501-74	spanner
75	ZMDC501-75	breather shell
76	ZMDC501-76	breather
77	ZMDC501-77	breather cover
78	ZMDC501-78	battery compartment assembly
79	ZMDC501-79	controller assembly
80	ZMDC501-80	oil pot assembly
81		motor assembly