




ZOMAX Electric 52v Brushcutter ZMDF512-BC02


1. Handle

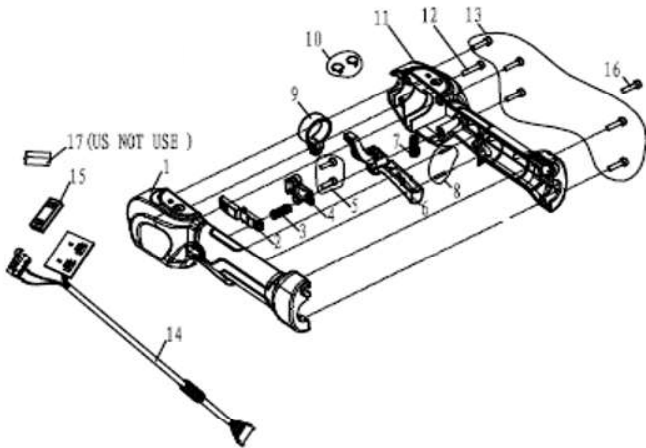


1 ZMDG5122P-A1	handle cover left
2 ZMDG5122P-A2	trigger lock
3 ZMDG5122P-A3	spring
4 ZMDG5122P-A4	fixed bracket
5 ZMDG5122P-A5	screw st2.9x12
6 ZMDG5122P-A6	trigger lock
7 ZMDG5122P-A7	spring
8 ZMDG5122P-A8	spring pin 2.5x12
9 ZMDG5122P-A9	clamp
10 ZMDG5122P-A10	button
11 ZMDG5122P-A11	handle cover right
12 ZMDG5122P-A12	screw st3.9x20
13 ZMDG5122P-A13	screw st3.9x16
14 ZMDG5122P-A14	pilot wire
15 ZMDG5122P-A15	sponge
16 ZMDG5122P-A16	screw st4.2x9.5
17 ZMDG5122P-A17	rubber pad

2. Engine

1 ZMDG5122P-B1	screw m5x18	17 ZMDG5122P-B17	front cover right
2 ZMDG5122P-B2	clamp	18 ZMDG5122P-B18	square nut m4
3 ZMDG5122P-B3	screw st3.9x16	19 ZMDG5122P-B19	cabin socket
4 ZMDG5122P-B4	rubber blanket	20 ZMDG5122P-B20	cabin spring
5 ZMDG5122P-B5	connector	21 ZMDG5122P-B21	restoration brace
6 ZMDG5122P-B6	screw m5x12	22 ZMDG5122P-B22	rear cover right
7 ZMDG5122P-B7	screw m5x25	23 ZMDG5122P-B23	battery cabin
8 ZMDG5122P-B8	rubber blanket	24 ZMDG5122P-B24	rear cover left
9 ZMDG5122P-B9	motor	25 ZMDG5122P-B25	top cover
10.1 ZMDG5122P-B10.1	controller (ce)	26 ZMDG5122P-B26	screw m4x10
10.2 ZMDG5122P-B10.2	controller (cTUVus)	27 ZMDG5122P-B27	clamp
11 ZMDG5122P-B11	socket copper sheet		
12 ZMDG5122P-B12	air director right		
13 ZMDG5122P-B13	air director left		
14 ZMDG5122P-B14	screw st3.9x12		
15 ZMDG5122P-B15	screw st2.9x12		
16 ZMDG5122P-B16	front cover left		

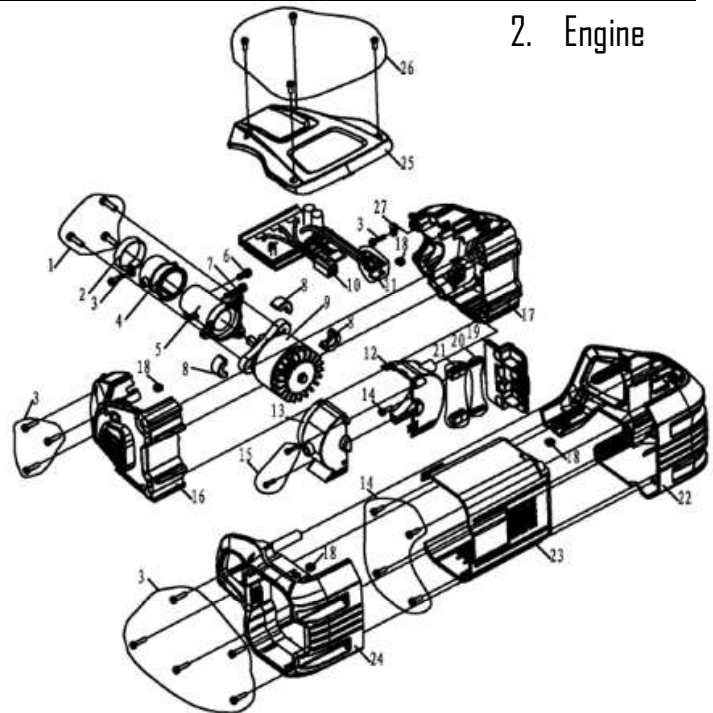

3. Handle 2

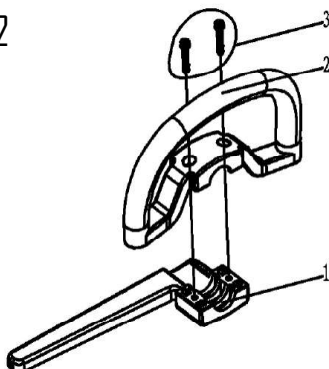


1 ZMDG5122P-C1	handle bracket
2 ZMDG5122P-C2	handle
3 ZMDG5122P-C3	screw m5x32



ZOMAX Electric 52v Brushcutter ZMDF512-BC02


CONTINUED

4. Rear Shaft

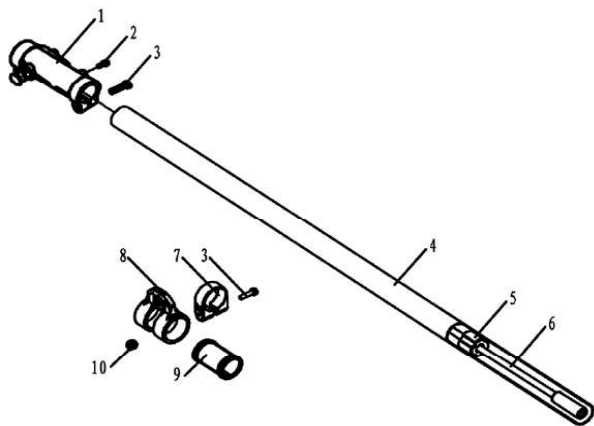


1	ZMDG5122P-D1	coupler
2	ZMDG5122P-D2	screw m5x12
3	ZMDG5122P-D3	screw m5x25
4	ZMDG5122P-D4	rear shaft
5	ZMDG5122P-D5	retainer assy
6	ZMDG5122P-D6	drive shaft
7	ZMDG5122P-D7	clamp
8	ZMDG5122P-D8	harness clamp
9	ZMDG5122P-D9	clamp bushing
10	ZMDG5122P-D10	nut m5

5. Front Shaft

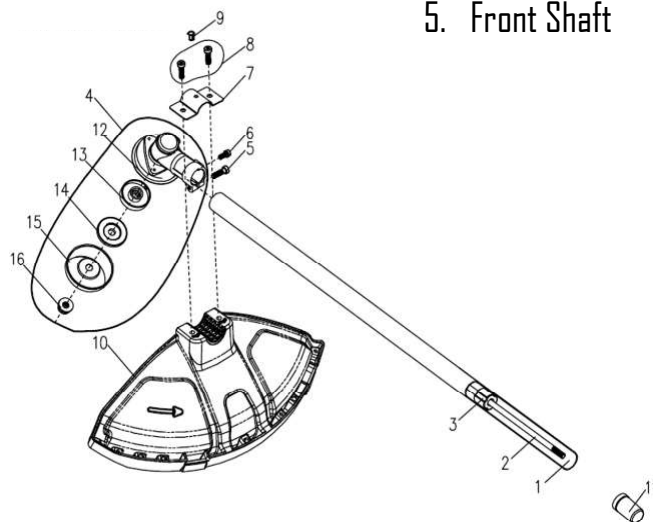

1	ZMDG5122P-E1	Front Shaft
2	ZMDG5122P-E2	Drive Shaft
3	ZMDG5122P-E3	Retainer Assy
4	ZMDG5122P-E4	Driver Box Assy
5	ZMDG5122P-E5	Screw M5x25
6	ZMDG5122P-E6	Screw M5x12
7	ZMDG5122P-E7	Pressing Plate
8	ZMDG5122P-E8	Screw M6x20
9	ZMDG5122P-E9	Rivet 4x8
10	ZMDG5122P-E10	Guard Assembly
11	ZMDG5122P-E11	Protective Sleeve
12	ZMDG5122P-E12	Transmission Box Body
13	ZMDG5122P-E13	Lower Platen
14	ZMDG5122P-E14	Upper Platen
15	ZMDG5122P-E15	Gearbox Dust Cover
16	ZMDG5122P-E16	nut M10x1.25 Counter Clockwise

6. Accessories

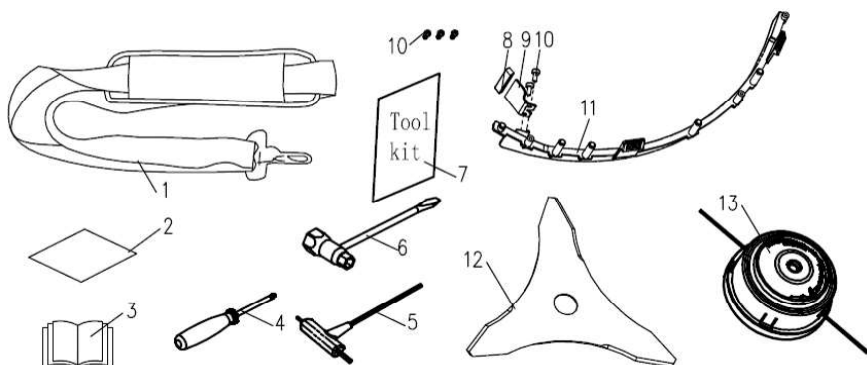

1	ZMDG5122P-F1	Shoulder Strap
2	ZMDG5122P-F2	Packing List
3	ZMDG5122P-F3	Operators Manual
4	ZMDG5122P-F4	Screw Driver
5	ZMDG5122P-F5	Wrench (3-4-5)
6	ZMDG5122P-F6	Wrench
7	ZMDG5122P-F7	Tool Bag
8	ZMDG5122P-F8	Twine Knife Cover
9	ZMDG5122P-F9	Twine Knife
10	ZMDG5122P-F10	Screw ST 4.2x9.5
11	ZMDG5122P-F11	Safety Guard Plate
12	ZMDG5122P-F12	3-Teeth Blade
13	ZMDG5122P-F13	Grass Head Component