

**JONO
&
JOHNO**



PORTABLE LOG HORSE ASSEMBLY INSTRUCTIONS

chainsawspares.com.au | sales@jonoandjohno.com.au


ASSEMBLY





DANGER!

It is recommended that safety gloves are used during the assembly of this item.

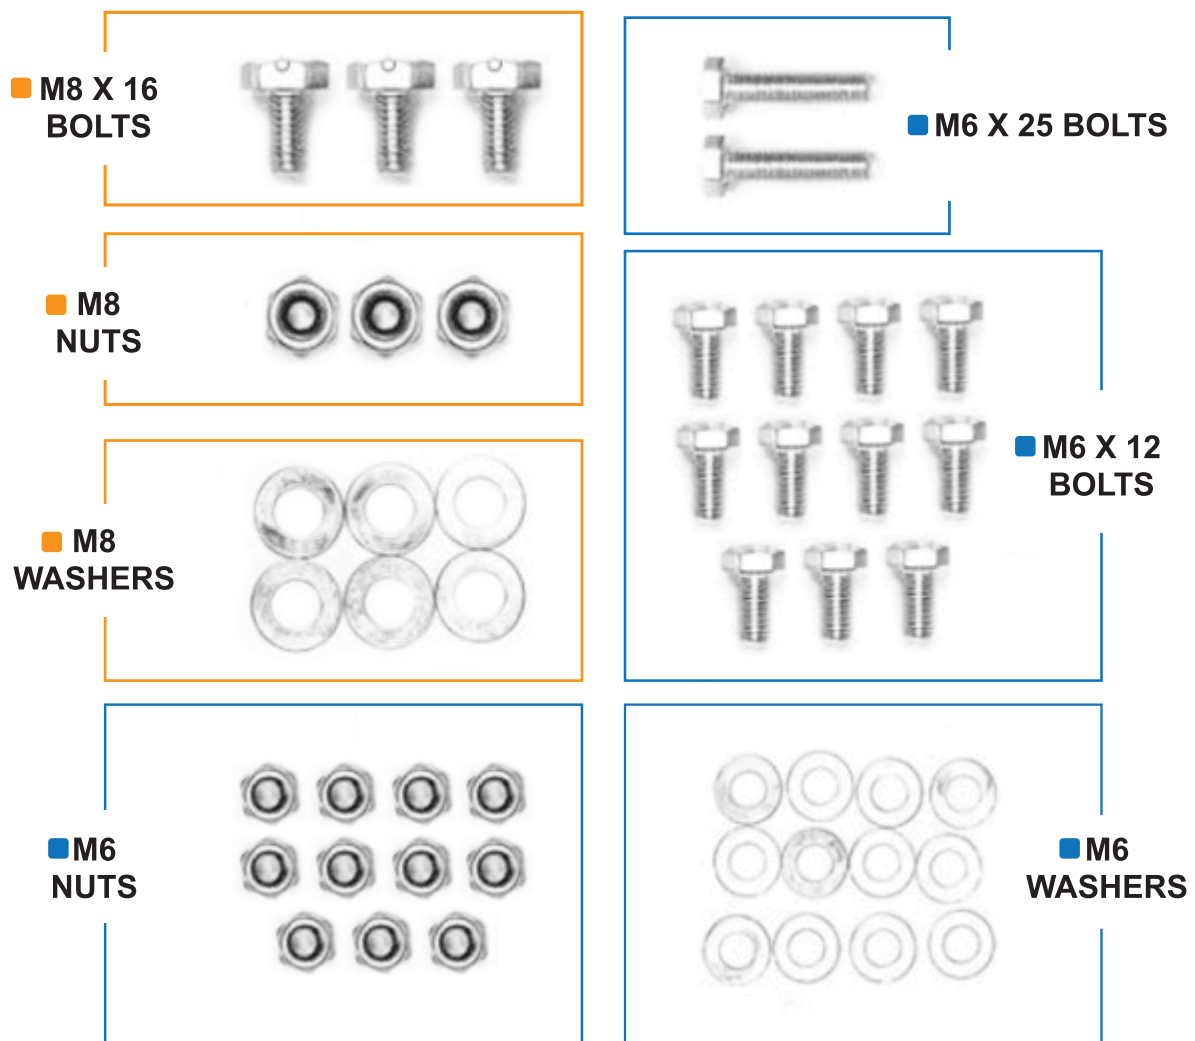HARDWARE INCLUDED



 The M8 bolts go with the M8 washers and nuts

 The M6 bolts go with the M6 washers and nuts



CONSTRUCTION

The Handy Saw Horse is supplied with Nylock Nuts. They are designed with a nylon collar, with a slightly smaller diameter to the bolt. The insert deforms elastically over the threads of the screw, but threads are not cut into the nylon. The nylon insert, locks the nut by applying a compressive force against the bolt. This therefore requires increased pressure when assembling.

- ☐ Firstly, pair the six legs using M8x1G bolt, two M8 washers and a M8 nut into the round hole, just below the serrated edges.
- ☐ Then fit a MGx12 bolt with two MG washers and a MG nut into the curved slot on both legs
- ☐ When secured, ensure that the legs can be opened and closed.



- ☐ Secure the shorter cross strut (80cm) to your chosen left and middle leg, using a MGx12 bolt with a MG washer and a MG nut.
- ☐ Attach the longer diagonal cross strut to the left and middle legs, again using a MGx12 bolt with a MG washer and a MG nut, ensuring the third hole, from the floor, on the middle leg.
- ☐ Attach the diagonal cross strut over the smaller cross strut using the MGx25 bolt with a MG washer and a MG nut.



- ☐ Turn the stand over and follow the same procedure with the diagonal strut in the opposite direction to the previous side. The diagonal strut should be fitted to the second hole of the middle leg on this occasion.



THE FINISHED PRODUCT




The 3 X M8 X 16 Bolts
Go In The Three Forks



2 x Long Braces



2 x Shorter Braces

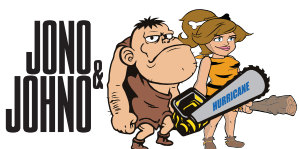

The Two Long M6 X25
Bolts Go Here & Here



**THE FINISHED
PRODUCT**

