

JONO & JOHNO



PORTABLE LOG HORSE ASSEMBLY INSTRUCTIONS

chainsawspares.com.au | sales@jonoandjohno.com.au


ASSEMBLY



DANGER!

It is recommended that safety gloves are used during the assembly of this item.

HARDWARE INCLUDED

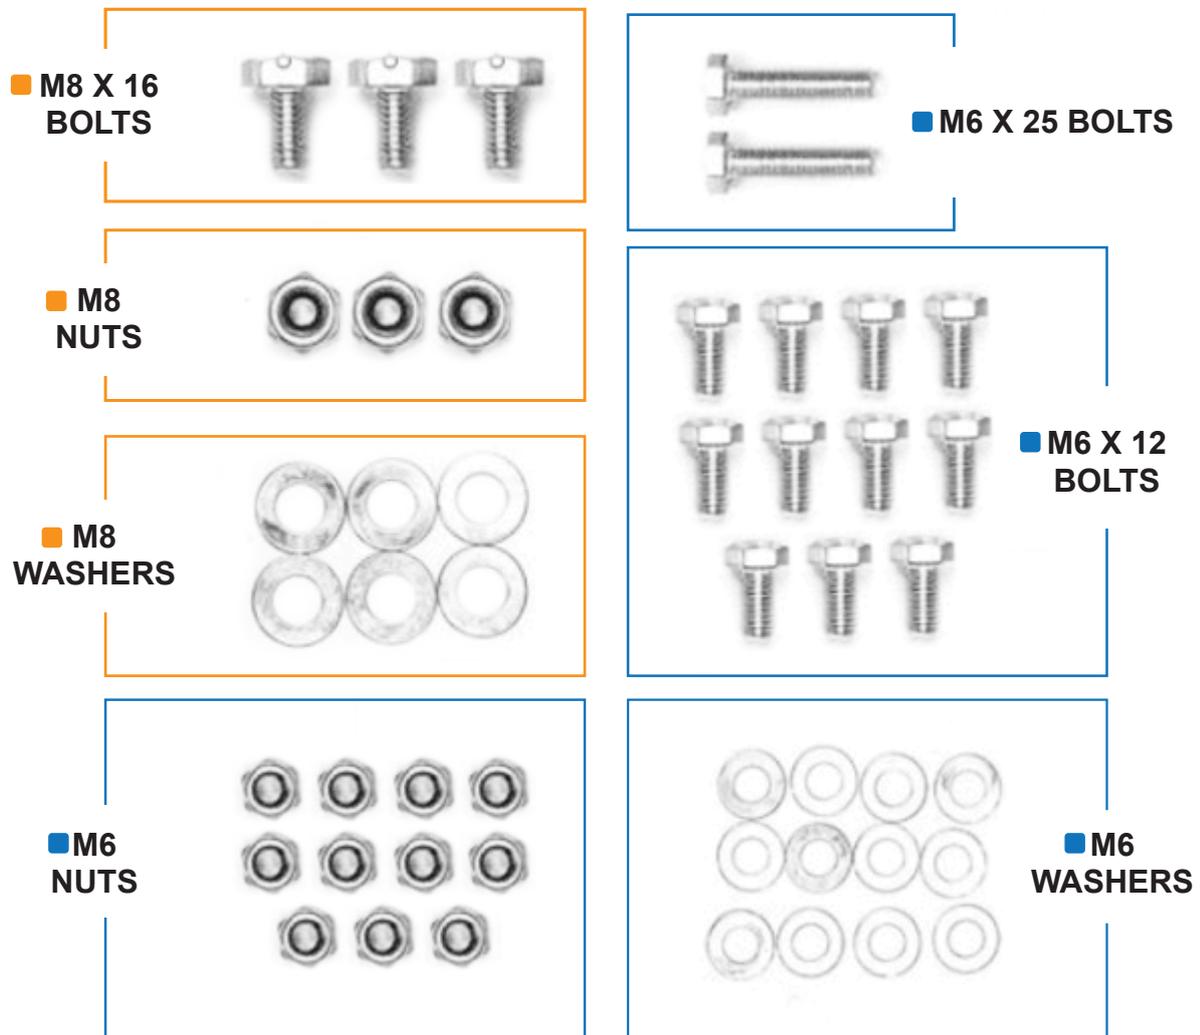

■ The M8 bolts go with the M8 washers and nuts


■ The M6 bolts go with the M6 washers and nuts



CONSTRUCTION

The Handy Saw Horse is supplied with Nylock Nuts. They are designed with a nylon collar, with a slightly smaller diameter to the bolt. The insert deforms elastically over the threads of the screw, but threads are not cut into the nylon. The nylon insert, locks the nut by applying a compressive force against the bolt. This therefore requires increased pressure when assembling.

- Firstly, pair the six legs using M8x16 bolt, two M8 washers and a M8 nut into the round hole, just below the serrated edges.
- Then fit a M6x12 bolt with two M6 washers and a M6 nut into the curved slot on both legs
- When secured, ensure that the legs can be opened and closed.

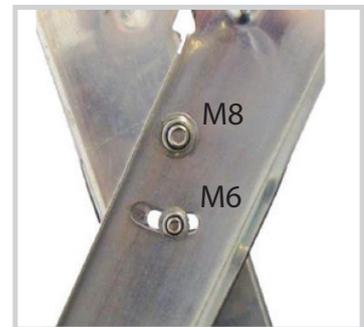

- Secure the shorter cross strut (80cm) to your chosen left and middle leg, using a M6x12 bolt with a M6 washer and a M6 nut.
- Attach the longer diagonal cross strut to the left and middle legs, again using a M6x12 bolt with a M6 washer and a M6 nut, ensuring the third hole, from the floor, on the middle leg.
- Attach the diagonal cross strut over the smaller cross strut using the M6x25 bolt with a M6 washer and a M6 nut.




- Turn the stand over and follow the same procedure with the diagonal strut in the opposite direction to the previous side. The diagonal strut should be fitted to the second hole of the middle leg on this occasion.



THE FINISHED PRODUCT



The 3 X M8 X 16 Bolts
Go In The Three Forks

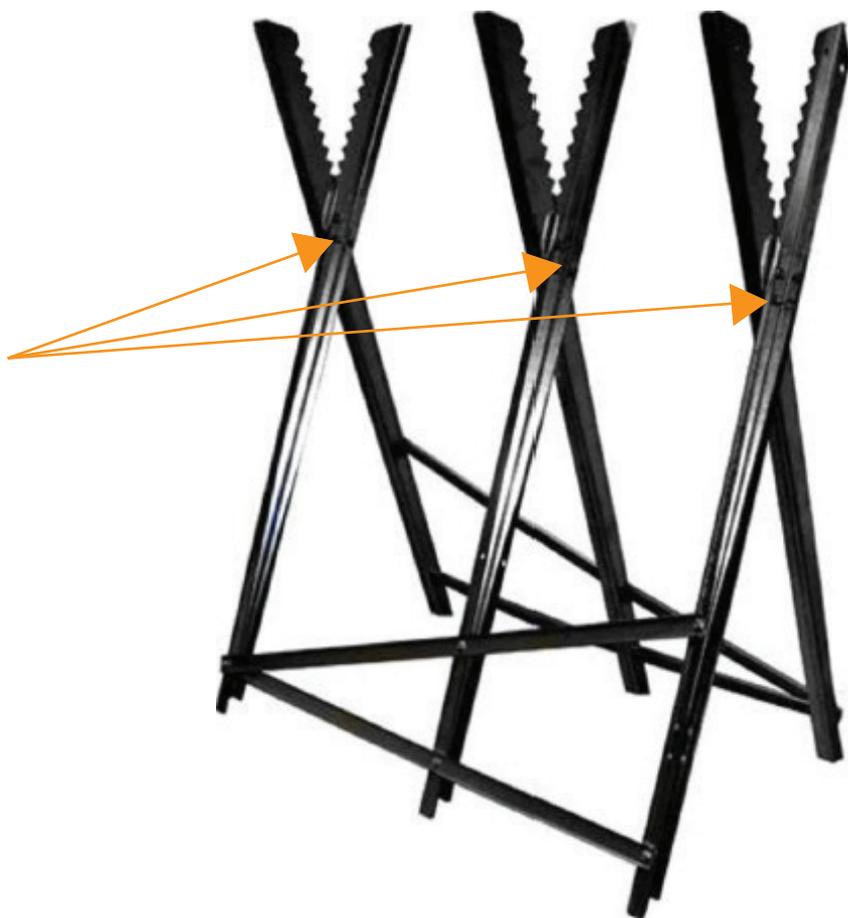

2 x Long Braces



2 x Shorter Braces






The Two Long M6 X25 Bolts Go Here & Here



THE FINISHED PRODUCT



SPARE PARTS

picture	Part	size	Qty	SKU
	M6 X 12 Bolt	6*12	11	LT-80CM-A
	M8 x 16 Bolt	8*16	3	LT-80CM-B
	M6 x 25 Bolt	6*25	2	LT-80CM-C
	M6 Washer	Q6	13	LT-80CM-D
	M8 Washer	Q8	6	LT-80CM-E
	M6 Nut	M6	13	LT-80CM-F
	M8 Nut	M8	3	LT-80CM-G
	Leg	1000	6	LT-80CM-H
	Long cross brace	830	2	LT-80CM-I
	Short cross brace	790	2	LT-80CM-J

